

PRESTO™

Nonstick

Mesh Screens

for use with Presto® Dehydro™ Food Dehydrators

HOW TO USE:

Position mesh screen on dehydrator tray. Place the food you want to dry on the mesh screen. Once the food is dehydrated, lift the mesh screen out of the tray, using the cutouts on the side of the screen. Bend the screen, if necessary, to help remove the dehydrated food. Wash screens in warm, sudsy water to clean.