

# PRESTO®

## ELECTRONIC DIGITAL TIMER OPERATING INSTRUCTIONS

### INSERT BATTERY BEFORE USING

1. Remove the battery compartment cover on the back of the unit by sliding it in the direction of the arrow (Fig. A).
2. Insert one AAA battery into the compartment matching the + and - symbols as indicated inside the battery compartment.
3. Replace battery cover, making sure it locks in place.

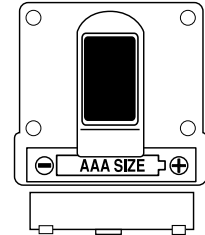


Fig. A

Battery Cover

### TO USE COUNT DOWN TIMER (Up to 99 MIN 59 SEC)

1. Press MIN and SEC buttons for desired timing period. Press and hold the buttons for faster setting.
3. Press START/STOP button to begin timing. The “M” and “S” on the display will flash when timer is in use.
4. To stop timing, press START/STOP button. To restart the timer press START/STOP again.
5. After time elapses, alarm beeps for 30 seconds. To stop the beeping, press either the MIN, SEC, or START/STOP button.
6. To reset the timer to 00:00, press the MIN and SEC buttons simultaneously.

### TO USE TIMER MEMORY RECALL

1. After alarm stops sounding, the pre-set time will appear in the display. Press the START/STOP button to count down for another lap.

Note: If you stop the timer while it is beeping and you want to recall the pre-set time, simply press the START/STOP button and it will appear on the display. Press the START/STOP button a second time to count down for another lap.

### TO USE COUNT UP/STOPWATCH

1. Press the MIN and SEC buttons simultaneously to reset to 00:00.
2. Press the START/STOP button to start counting up in seconds.
3. To interrupt the count, press the START/STOP button. To resume counting, press the START/STOP button again.
4. Press the MIN and SEC buttons simultaneously to reset to 00:00.

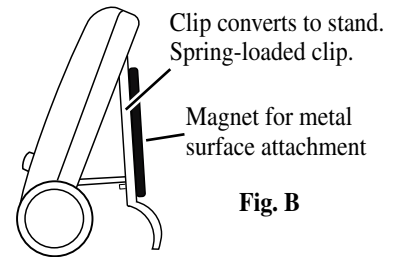


Fig. B

Metal brace rests on pegs

### CLIP/STAND

Your clock/timer has a spring loaded clip on the back (Fig. B), so you can clip it onto clothing or other things. The clip converts to a stand by pressing down on top of the clip (above magnet) and moving the timer slightly so the metal brace flips out and rests on top of the two pegs on the clip to form an easel.

### Consumer Service Information

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8:00 AM to 4:30 PM (Central Time)
- Email us at our website [www.GoPresto.com](http://www.GoPresto.com)
- Write: National Presto Ind., Inc., Consumer Service Dept. 3925 N. Hastings Way, Eau Claire, WI 54703-3703

Inquiries will be answered promptly by telephone, email, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning, should be performed by our Factory Service Department. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair.

### Send appliances for repair to:

**Canton Sales and Storage Co., Presto Factory Service Dept. 555 Matthews Dr., Canton, MS 39046-0529**

The Presto Factory Service Department is equipped to service all PRESTO® appliances and supply genuine PRESTO® parts. Genuine PRESTO® replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine PRESTO® parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO® replacement parts, look for the PRESTO® trademark.

### PRESTO® LIMITED WARRANTY

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to batteries, if any, or to damage caused by shipping. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the Presto Factory Service Department. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC. Eau Claire, WI 54703-3703