

PRESTO | precise®

10-quart Multi-use Programmable

Pressure Cooker Plus

SLOW COOKER • RICE COOKER • STEAMER • AND MORE



Estas instrucciones también están disponibles en español.

Para obtener una copia impresa:

- Descargue en formato PDF en www.GoPresto.com/espanol.
- Envíe un correo electrónico a contact@GoPresto.com.
- Llame al 1-800-877-0441, oprima 2 y deje un mensaje.



Visit www.PrestoPrecise.com

INSTRUCTIONS AND RECIPES

©2019 National Presto Industries, Inc.

Form 4048-007A

This is an  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Improper use may result in bodily injury or property damage.
2. Before each use, check both the vent pipe (see Fig. A, page 3) and vent filter (see Fig. E, page 3) to be certain they are free of any blockage. Remove the filter and clean any debris from both the vent pipe and filter (see cleaning instructions on page 8).
3. Always check the air vent/cover lock to be sure it moves freely before use.
4. To protect against electrical shock, do not immerse cord, plug, or cooker body in water or other liquid.
5. Do not let children handle or put electrical cords or plugs in their mouths.
6. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, press cancel, then remove plug from wall outlet.
7. Unplug cord from unit and outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning.
8. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the Presto Factory Service Department for examination, repair, or electrical or mechanical adjustment.
9. **WARNING!** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter or table. Never plug cord into outlet below counter or use an extension cord. Do not let cord touch hot surfaces.
10. To guard against electrical shock, cook only in the removable cooking pot provided.
11. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Use only genuine Presto® accessories and replacement parts.
12. Intended for countertop use only.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Do not fill above the $\frac{2}{3}$ fill line. However, the cooking pot should never be filled above the $\frac{1}{2}$ fill line when cooking foods that foam, froth, or expand, such as rice, grains, dry beans, peas, and lentils, or foods that are mostly liquids, such as soups. Overfilling may cause a risk of blocking the vent pipe and developing excess pressure. See food preparation instructions.
15. Do not pressure cook applesauce, cranberries, rhubarb, cereals, pasta, split peas, and soup mixes containing split peas, pasta, or grains. These foods tend to foam, froth, and sputter and may block the vent pipe, vent filter, and air vent/cover lock.

16. This appliance cooks under pressure. Improper use may result in scalding injury. Make certain pressure cooker is properly closed before operating. See “How to Use” instructions (page 7).
17. Air bubbles may form when cooking certain foods (see the WARNING information on page 4). After cooking these foods, disperse any air bubbles by rocking the cooker from side to side as described on page 4.
18. Do not attempt to open the pressure cooker until all internal pressure has been released, the air vent/cover lock has dropped, and no steam escapes when the quick pressure release valve is rotated to the *STEAM OUT* position. Any pressure in the cooker can be hazardous. Never force open the temperature sensor arm. See “How to Use for Pressure Cooking” instructions (page 7).
19. Extreme caution must be used when moving a pressure cooker containing hot liquids. Do not touch hot surfaces. Always use appliance handles.
20. To ensure safe operation and satisfactory performance, replace the sealing ring if it shrinks, becomes hard, deformed, cracked, or torn. Use only genuine Presto® replacement parts.
21. Close supervision is necessary when the pressure cooker is used near children. It is not recommended that children use the pressure cooker.
22. Do not use this appliance for other than intended use.
23. Do not use this appliance for deep fat frying.
24. Do not use outdoors.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

IMPORTANT CORD INFORMATION

To reduce the risk of electric shock, this appliance has a 3-prong grounded plug. If the plug on this appliance does not fit into your outlet, contact a qualified electrician. Do not attempt to modify the plug in any way. A short detachable power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. **DO NOT USE WITH AN EXTENSION CORD.** Connect the power supply cord to a 120VAC electrical outlet only.

INTRODUCTION

With your new Presto® Multi-use Programmable Pressure Cooker Plus, you’ll discover how fast and easy it is to prepare a wide variety of delicious meals. The unit is pre-programmed for pressure cooking. It automatically maintains the proper temperature while cooking then reduces pressure and switches to the keep warm mode when cooking is complete.

The innovative technology senses the temperature inside the cooker to assure the exact pressure is maintained for precise cooking no matter where you live. No altitude adjustments are needed. There are 9 built-in safety features, including a cover locking system that allows pressure to build only when the cover is closed. It also prevents the cover from being opened until pressure is safely reduced.

In addition to pressure cooking, this appliance can be used to brown, sauté, slow cook, and keep cooked foods warm.

TABLE OF CONTENTS

Important Safeguards	1	Pressure Cooking Recipes and Timetables	
Introduction.....	2	Soups and Stews.....	11
Before First Use	3	Meat and Poultry	13
Cooker Parts.....	3	Hard-Cooked Eggs	17
Important Information.....	4	Fish and Seafood	17
How to Operate the Digital Control Panel.....	5	Vegetables.....	18
How to Use for Pressure Cooking	7	Dry Beans, Peas, and Lentils.....	20
Pressure Release Methods.....	8	Grains	22
How to Use for Slow Cooking.....	8	Desserts	24
Cleaning	8	Slow Cooking Recipes	26
Care and Maintenance.....	9	Recipe Index	27
Helpful Hints.....	9	Consumer Service Information	28
Questions and Answers	10	Warranty.....	28

 
BEFORE FIRST USE

As received, your pressure cooker will be fully assembled. Before removing the cover, you will need to unlock the green locking latch according to the instructions below.

Before use, remove all packaging material, including the protective liner which is on the heating plate inside the cooker body. Disassemble the cooker parts and clean them as directed below. Become familiar with the various parts (Fig. A) and read all instructions carefully.

COOKER PARTS

Remove the Cooker Cover







1. Before removing the cover, you will need to unlock the green locking latch. Begin by positioning the cooker so the digital display faces you. To unlock the latch, grasp the sides of the latch and turn it towards you until it stops (Fig. B). Lift the temperature sensor arm out of the sensor hole in the cover (Fig. C).
2. Once you have released the temperature sensor arm from the cover, rotate the cover counterclockwise until the *INSTALL/REMOVE* vertical mark is within the  mark on the cooker body (Fig. D). Then lift the cover straight up off the cooker body.

Disassemble Cooker Parts for Cleaning


It is recommended that the pressure cooker be thoroughly washed before first use to remove any manufacturing lubricants.

1. Lift the cooking rack and removable cooking pot out of the cooker body. Remove all packaging.
2. Invert the cover and pull the sealing ring frame out from the cover (Fig. E). Then remove the vent filter for cleaning. To remove, place the inverted cover on the counter, then rest a table knife on the rim of the cover and insert the tip into one of the filter slots (Fig. F); lift the filter up. **NOTE:** Although you will not need to remove the filter after every use, you should periodically remove it for cleaning.
3. Remove the sealing ring from the sealing ring frame. Wash the sealing ring, sealing ring frame, vent filter, cooking rack, and removable cooking pot in warm, soapy water. Rinse and dry thoroughly.
4. Clean the cooker cover with a damp, soapy cloth. **Do NOT immerse the cooker cover in water.**

CAUTION! To prevent electrical shock, never pour water into the cooker body or immerse it or the power cord in water. Always be sure the cooking pot is **COMPLETELY DRY** before placing it back in the cooker body.

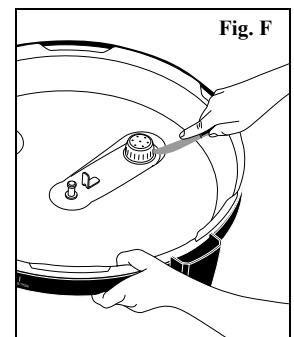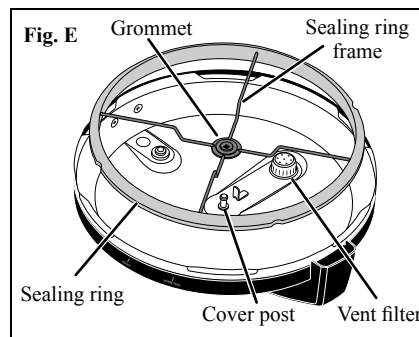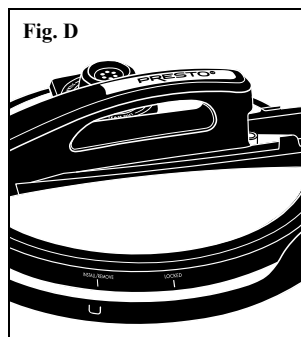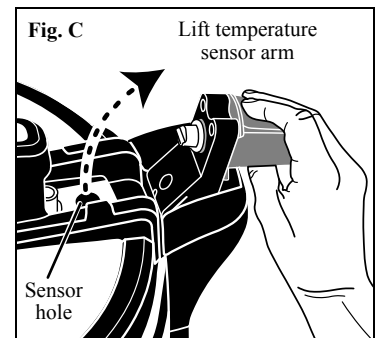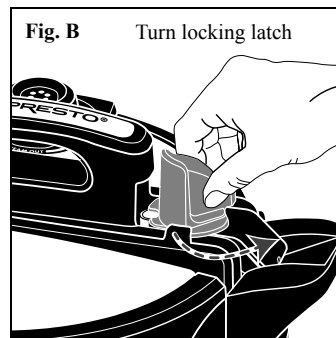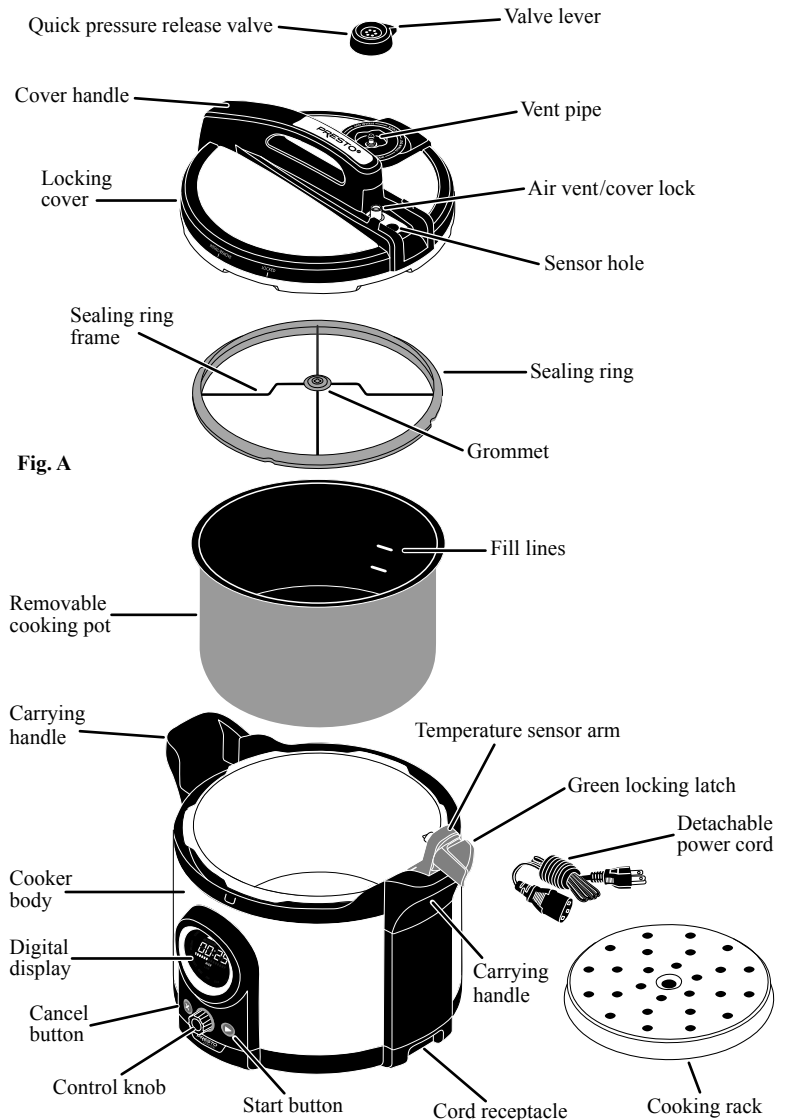

- After cleaning, reassemble the cover. Be sure the filter is placed over all 3 clips (Fig. G) when reattaching the vent filter. Then push it in place. You will hear a snap when it is in the proper position. It should fit tightly.

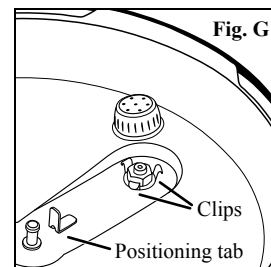


Place the sealing ring back onto the sealing ring frame. Reattach the frame to the cover by fitting the grommet over the cover post (Fig. E, page 3). Rotate the frame so the bars do not interfere with the positioning tab (Fig. G). Then push the frame down until it is securely positioned in the cover.

IMPORTANT INFORMATION


In order for the unit to function properly, **always** follow these instructions:

- Be sure the bottom of the removable cooking pot and the heating plate within the cooker body (Fig. H) are free of debris before placing the cooking pot in the cooker body.

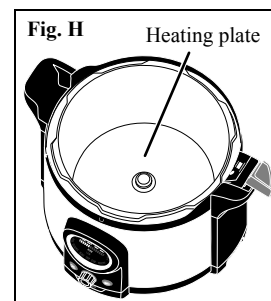


CAUTION! To prevent electrical shock, NEVER USE THE UNIT WITHOUT THE REMOVABLE COOKING POT. Also, be sure the outside of the cooking pot is COMPLETELY DRY before placing it into the cooker body.

- Check both the vent pipe and vent filter to be sure they are clear. In order to check the vent pipe, you will need to remove the quick pressure release valve from the cover (Fig. I). Then hold the cover up to the light and make sure you can see light coming through the vent pipe. If you cannot, remove the sealing ring frame and vent filter (see page 3) and clean the vent pipe with a small brush or pipe cleaner to remove the blockage. Reattach the sealing ring frame to the cover.

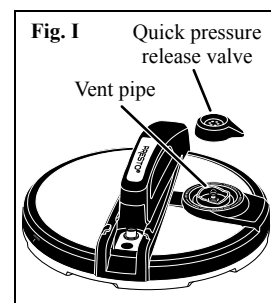


- Always verify that the sealing ring frame is attached to the pressure cooker cover before cooking.
- Make sure you have not overfilled the cooking pot. Do not fill above the $\frac{2}{3}$ fill line when cooking most foods. When cooking foods that foam, froth, or expand, such as rice, grains, dry beans, peas, and lentils, or foods that are mostly liquids, such as soups, never fill the cooking pot above the $\frac{1}{2}$ fill line. For your convenience, both the $\frac{2}{3}$ and $\frac{1}{2}$ fill lines are marked inside of the cooking pot (Fig. J). In addition, in each section of the recipes you will find instructions on the maximum fill level for each type of food.

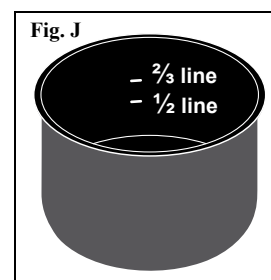

- Always make sure cooking liquid has been added to the cooking pot. Two cups of liquid is the minimum amount.
- Always follow special procedures found on page 20 when pressure cooking dry beans, peas, and lentils. During cooking, these foods tend to froth and foam which could cause the vent pipe to become blocked.
- Always follow the special procedures found on page 22 when pressure cooking rice and grains.
- Never pressure cook applesauce, cranberries, rhubarb, cereals, pasta, split peas, and soup mixes containing split peas, pasta, or grains. These foods expand so much as a result of foaming and frothing that they should never be cooked under pressure.

- Do NOT use the quick pressure release method after cooking dry beans, peas, lentils, grains, or foods that are mostly liquid, such as soup, sauces, and stews (see page 8).
- Always verify that the air vent/cover lock is down before attempting to open the cooker (see Fig. Q, page 7). If it is up, the cooker contains pressure which, if released, may result in burns and/or property damage. Check that no steam is emitted when the pressure release valve is rotated to the *STEAM OUT* position.

- WARNING!** Air bubbles may form when pressure cooking foods with a higher fat content (such as meats with visible fat or poultry with skin and visible fat) or thicker foods (such as stews, sauces, heavy soups, dried beans, lentils, and grains such as rice and barley). Even after all pressure has been released, those air bubbles can rise to the surface when the cover is opened, unless they are dispersed beforehand. If the air bubbles are not dispersed, hot food may erupt out of the cooker, which could cause serious burn injuries.

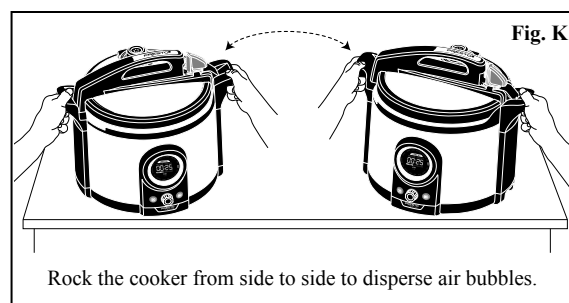

To disperse the air bubbles, follow these steps: First, verify the pressure has been released (the air vent/cover lock will be in the down position). Next, prior to opening the cover, gently rock the cooker from side to side. To rock, grasp the handles and tilt the cooker to the left, so the right side of the cooker lifts 2 inches off the counter. Then rock to the right so the left side of the cooker lifts 2 inches off the counter (Fig. K). Repeat once. Verify the air vent/cover lock is still down before attempting to open the cover.

HOW TO OPERATE THE DIGITAL CONTROL PANEL

Whenever you plug in the unit, it will beep once and all of the program options will appear in the display window on the digital control panel. The KEEP WARM setting will be flashing. This is the “Ready State” (Fig. L).

The following information describes how the control panel buttons and preset programs function.

CONTROL KNOB

The control knob is used to select the preset programs that appear around the perimeter of the display window as well as adjust the time and cook settings. As you turn the knob, each preset program will flash.

START BUTTON

The start button activates the unit once the cooking function and time have been selected.

CURRENT MODE INDICATORS

Once the start button is pressed, the mode the unit is currently in will illuminate. There are three modes: WARM UP, COOKING, and KEEP WARM.

CANCEL BUTTON

The cancel button allows you to end the cooking or keep warm function at any time. Simply press the cancel button once. When you press cancel, the unit will return to the “Ready State.”

TIMER

When pressure cooking, the timer will not start counting down until the cooker reaches the correct temperature. When slow cooking, the timer immediately starts counting down once the slow cooking function is activated. When the unit is in the KEEP WARM mode, the timer will count up to indicate how much time the unit has been in this mode.

PROGRESS BAR

During the warmup period, the progress bar will scroll to indicate the unit is heating. Once cooking begins, the progress bar will start to light up. It will increase in length as cooking progresses to correspond with the cooking time (e.g., if 15 minutes of a 20 minute program have elapsed, 75% of the bars will be illuminated).

PRESSURE/SLOW COOK SETTING INDICATOR

Both pressure cooking and slow cooking have a HIGH and LOW setting. Whatever setting is being used will be illuminated in the lower half of the display window.

KEEP WARM FUNCTION

When the cooking time has expired, the unit will automatically switch to the keep warm mode. When in the keep warm mode, KEEP WARM will illuminate and the timer will begin to count up. The unit will remain on for 4 hours and then shut off automatically, unless the cancel button is pressed.

The keep warm function can also be manually selected. Turn the control knob until the KEEP WARM setting on the perimeter of the display flashes. Then press the start button.

BROWN/SAUTÉ FUNCTIONS

Use these functions to brown or sauté foods prior to pressure cooking or slow cooking. Browning is typically used for meats and poultry. Sautéing is used for vegetables and to reduce liquid after pressure cooking to make a flavorful sauce for your food.

Turn the control knob to the desired function, BROWN or SAUTÉ. Then press the start button. COOKING will illuminate and the progress bar will continuously scroll to indicate the function is active. Allow unit to preheat for 3 to 4 minutes before browning or sautéing your food.

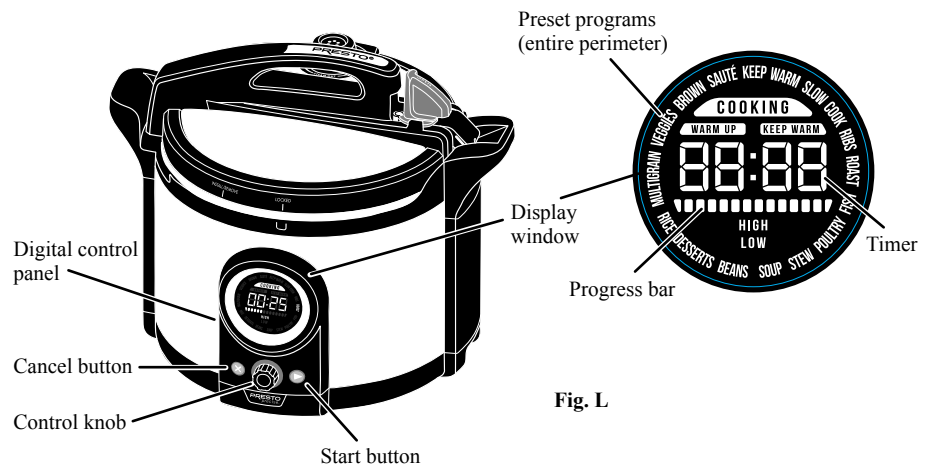


Fig. L

SLOW COOK FUNCTION

For slow cooking, turn the control knob to the SLOW COOK setting. Note as you continue to turn the control knob, the unit will change between the LOW and HIGH options. The default cook time is 4 hours on high and 8 hours on low. You can manually adjust the slow cooking time in 30-minute increments by pressing the control knob once and then turning the knob to the desired time.

The maximum slow cooking time at both the high and low settings is 9 hours and 30 minutes and the minimum slow cooking time is 30 minutes. When the time is set, press the start button to activate the unit. COOKING will illuminate and the timer will immediately begin counting down. As cooking progresses, the number of bars lit on the progress bar will increase.

PRESSURE COOKING PRESET PROGRAMS

The digital control panel includes 12 pressure cooking presets. Turn the control knob to select the desired program. **NOTE:** VEGGIES has two presets, HIGH and LOW. Simply turn the knob to select one or the other.

Once the program is selected it will flash and the time and pressure for that program will be displayed, unless you have selected KEEP WARM, BROWN, or SAUTÉ. Press the start button to activate the unit. For pressure cooking, the maximum cooking time is 2 hours and the minimum cooking time is 0 minutes.

Because of the great variety of foods within a food grouping, the preset time may need to be adjusted manually. If you desire a time different than that displayed for the program, press the control knob and the default cook time will begin to flash. Then turn the control knob to increase or decrease the time. Once the time you desire is displayed, press the start button to activate the unit. **NOTE:** If you fail to change the time, press the cancel button and try again. Use the cooking charts included in the recipe section as a guide for recommended cooking times.

PRESET PROGRAMS	PRESET TIME	PRESET PRESSURE
RICE	1 minute	LOW
MULTIGRAIN	4 minutes	LOW
RIBS	20 minutes	HIGH
ROAST	45 minutes	HIGH
POULTRY	9 minutes	HIGH
FISH	1 minute	LOW
SOUP	10 minutes	HIGH
STEW	5 minutes	HIGH
VEGGIES (HIGH)	5 minutes	HIGH
VEGGIES (LOW)	1 minute	LOW
DESSERTS	20 minutes	LOW
BEANS	4 minutes	LOW

NOTE: Once the start button is pressed, the cooking time will disappear from the display. The time will reappear about a minute before cooking begins. The unit begins counting down when the correct temperature is reached.

ADJUSTING PRESSURE MANUALLY

You can manually set the pressure instead of using the preset programs, if you prefer. Simply press and hold the control knob for a few seconds. All of the preset cooking programs will disappear in the display window and the unit will reset to 00:00 and HIGH pressure. The cook time will be flashing to indicate the unit is in adjustment mode. Turn the control knob to adjust the time. Once you have set the desired time, if you want to adjust the pressure from HIGH to LOW, press the control knob again. HIGH will flash. Turn the control knob until LOW is flashing. Press the start button to activate the unit. If you accidentally select the wrong pressure setting or time, simply press cancel to reset the cooker and try again.

High pressure is suitable for meat, poultry, soups, and stews. Use low pressure for fish, some vegetables, beans, multigrains, and desserts.

HOW TO USE FOR PRESSURE COOKING

Before you begin cooking, review the “Important Information” instructions on page 4 and always verify that the unit is properly assembled.

1. Place the pressure cooker on a dry, level surface. To avoid steam damage to cabinets, position the cooker so the quick pressure release valve is not directly under cabinets.
2. Place the removable cooking pot into the cooker body. NEVER USE THE UNIT WITHOUT THE REMOVABLE COOKING POT.
3. Attach power cord to cooker, making sure to fully insert it in the cooker receptacle. Then plug into a 120VAC wall outlet.

4. Prepare ingredients according to the directions in the recipe you have selected.
If the recipe states to brown or sauté food, select the BROWN or SAUTÉ function (see page 5) and press the start button to activate the unit. Preheat the unit for 3 to 4 minutes and brown or sauté food according to recipe. When browning/sautéing is complete, press the cancel button so you can select another cooking function.

5. If recipe calls for using the cooking rack, place cooking rack into the cooking pot. See “Helpful Hints” on page 9 for guidance on when to use rack.

Add ingredients to the cooking pot, being sure not to overfill (see page 4 for information on filling).

6. Pour liquid into the cooking pot, as specified in the recipe or timetable. If not stated, add 2 cups of liquid to the pot.

7. Place the cover on the cooker body, aligning the *INSTALL/REMOVE* vertical mark within the \square mark on the cooker body (Fig. D, page 3). Rotate the cover clockwise until it stops. The pressure cooker cover is properly installed when the *LOCKED* vertical mark is within the \square mark on the cooker body (Fig. M).

8. With the digital display facing you, lower the temperature sensor arm and insert the sensor into its hole in the cover (Fig. N). It may be necessary to rotate the cover slightly so the hole aligns with the sensor. Lock the cover by grasping the green latch. Using a slight downward pressure, turn the latch clockwise until it is aligned with the handle (Fig. O).

9. Push the quick pressure release valve onto the vent pipe and point the lever to any of the three **COOK** positions (Fig. P). There is no difference between the three positions.

10. Using the control knob, scroll to select the appropriate preset for the desired function and/or type of food. Adjust the cooking time as necessary (see page 6). Or, if preferred, manually set the pressure and time (see page 6).

11. Press the start button to activate the unit. WARM UP will illuminate. As the unit is heating, air will automatically exhaust around the air vent/cover lock. You will hear this venting. When pressure begins to build, the air vent/cover lock will slide up (Fig. O), so the locking latch cannot be turned and the cover cannot be opened. Once the unit reaches the correct temperature, COOKING will illuminate and the timer will start to count down. During cooking you may notice some steam releasing from the quick pressure release valve. This is normal. **NOTE:** Occasionally you may hear a ticking sound. This is the unit cycling on and off during cooking to maintain the pressure or heat.






12. When the cook time has expired, the unit will beep 10 times and automatically switch to the keep warm mode. KEEP WARM will be illuminated.

13. Reduce pressure according to the recipe or timetable instructions. (See instructions on page 8 for releasing pressure.)

Do not open the cooker until all internal pressure has been released. **You will know the pressure is completely reduced when the air vent/cover lock drops and no steam is emitted when the pressure release valve is in the STEAM OUT position (Fig. Q).**

WARNING! Never attempt to open the cooker when the air vent/cover lock is up. Doing so could result in severe burns and/or property damage from the release of pressurized contents.

Next, if cooking thicker or higher fat foods as described on page 4, rock the cooker from side to side as illustrated to ensure all air bubbles are dispersed. Verify the air vent/cover lock is still down before attempting to open the cover.

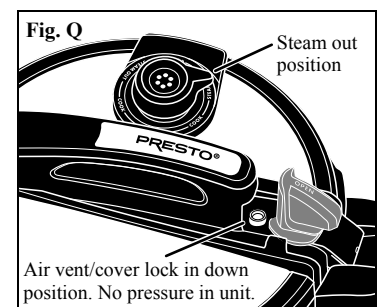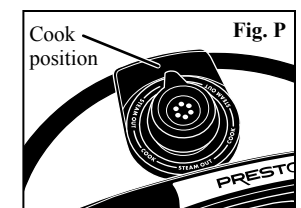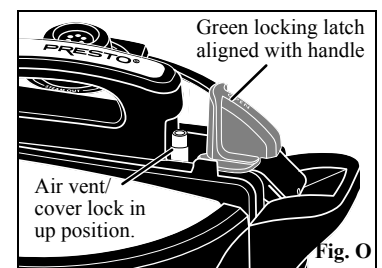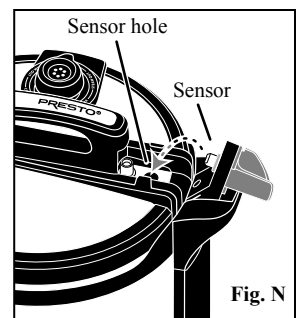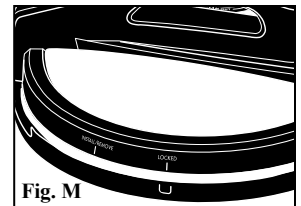

14. After pressure is completely reduced and potential air bubbles dispersed, unlock the cover as described on page 3. When removing the cover, lift it toward you to keep any steam away from you. Place cover upside down on counter.
CAUTION! Steam may escape and hot liquid may drip from the cooker cover when removing it. Steam and hot liquid can cause burns.
15. Remove food from cooker using a heat-resistant plastic, nylon, rubber, or wooden utensil. Do not use metal utensils as they may scratch the nonstick surface.
16. When cooking is complete, unplug power cord from wall outlet and then from pressure cooker. Allow cooker to cool completely before cleaning.

PRESSURE RELEASE METHODS

1. **Quick Pressure Release.** This method is used when cooking vegetables, seafood, and other delicate foods. **WARNING!** To prevent the risk of severe personal injury and property damage, do NOT use the quick pressure release method after cooking dry beans, peas, lentils, grains, or foods that are mostly liquid, such as soup, sauces, and stews.

When cooking time is up, press the cancel button and immediately move the lever on the quick pressure release valve to any of the three *STEAM OUT* positions (Fig. Q, page 7). You will hear sputtering and steam will release for approximately 2 to 3 minutes.

Pressure is completely reduced when the air vent/cover lock has dropped (Fig. Q).

CAUTION! To prevent steam burns, keep hands and face away from the top of the pressure cooker as pressure is being released.

2. **Natural Pressure Release.** This method is used when cooking most foods.

When cooking time is up, keep the quick pressure release valve in the *COOK* position. Let the pressure cooker cool for 15 minutes. The unit will beep 2 times to indicate that 15 minutes has passed. Then move the pressure release valve to any of the *STEAM OUT* positions.

NOTE: If desired, the food may be left in the cooker, which automatically switches to the keep warm mode. Prior to opening the cooker, be sure to disperse any air bubbles by rocking it from side to side (see instructions on page 4).

HOW TO USE FOR SLOW COOKING

1. Follow steps 1 through 8 of the “How to Use for Pressure Cooking” instructions on page 7.
2. Push the quick pressure release valve onto the vent pipe. **IMPORTANT:** Point the lever to any of the three *STEAM OUT* positions.
3. Using the control knob, scroll to select the SLOW COOK LOW or HIGH function. Adjust the slow cooking default time, if desired (see page 6). Press the start button to activate the unit. COOKING will illuminate and the timer will begin counting down.
4. When the cook time has expired, the unit will beep 10 times and automatically switch to the keep warm mode.
5. Press the cancel button. Unlock the cover as described on page 3. When removing the cover, lift it toward you to keep any steam away from you. Place cover upside down on counter.
CAUTION! Steam may escape and hot liquid may drip from the cooker cover when removing it. Steam and hot liquid can cause burns.
6. Remove food from cooker. Use a heat-resistant plastic, nylon, rubber, or wooden utensil. Do not use metal utensils as they may scratch the nonstick surface.
7. When cooking/keep warm are complete, unplug power cord from wall outlet and then from pressure cooker. Allow cooker to cool completely before cleaning.

CLEANING

After every use

1. After the cooker has cooled completely, remove the quick pressure release valve from the cover. Then detach the sealing ring frame from the cover (Fig. E, page 3). Remove the sealing ring from the frame. Do not remove the center grommet on the sealing ring frame.
If the vent filter appears dirty or contains debris, remove it from the underside of the cover, following the instructions on page 3.
2. Clean the cooker cover with a damp, soapy cloth and then dry completely. **Do NOT immerse the cooker cover in water.**
Wash the sealing ring, sealing ring frame, and vent filter in warm, soapy water. Do NOT wash these parts in the dishwasher.
Thoroughly dry all cover parts after cleaning.
3. To be sure the vent pipe is clear, hold the cover up to the light and look through the vent pipe. Clean it with a small brush or pipe cleaner if it is blocked or partially blocked. If necessary, clean the vent filter with a small brush to remove any food particles from the slots and holes. Rinse and dry all parts thoroughly and reassemble.
4. Wash the cooking rack in warm, soapy water. Do NOT wash in the dishwasher.
5. Remove the cooking pot from the cooker body. Wash the pot in the dishwasher or in warm water and a mild detergent.




The nonstick surface may be cleaned with a non-metal cleaning pad, such as Scotch-Brite® Multi-Purpose Scrub Sponge or Scotch-Brite® Dobie® Cleaning Pad. **Do not use steel wool or abrasive cleaners on the cooking pot or the cooker body.** Soaking the cooking pot to loosen food residue is not necessary. If, however, soaking the pot is desired, do not soak for more than 2 hours as this may damage the nonstick finish.

CAUTION! To prevent electrical shock, never pour water into the cooker body or immerse it or the power cord in water. Always be sure the pot is COMPLETELY DRY before placing it back in the cooker body.

6. Clean the sensor, sensor arm, and plastic rim of the cooker body with a damp cloth. Avoid getting water inside the cooker body.

Occasionally

1. Remove the air vent/cover lock for cleaning. Place your finger over the top of the air vent/cover lock on the cover (Fig. R) and remove the gasket from the underside of the cover (Fig. S). Push the air vent/cover lock through the top of the cover. Wash it and the gasket in warm, soapy water. The metal shaft may be cleaned with a nylon mesh pad. Clean the cover hole with a small brush. After cleaning, reinsert the metal shaft from the top side of the cover down through the cover hole. Place a finger over the top of the air vent/cover lock and push the gasket onto the end of the metal shaft, fitting it into the groove.
2. Carefully remove the gasket on the sensor (Fig. T) and wash it in warm, soapy water. Clean the sensor with a damp cloth and place the gasket back on the sensor.
3. Wipe the outside of the cooker body with a damp cloth.

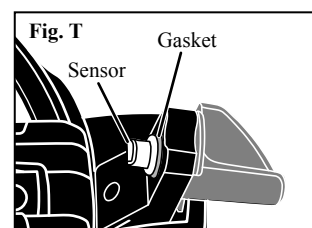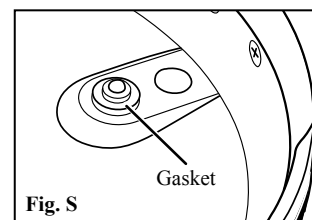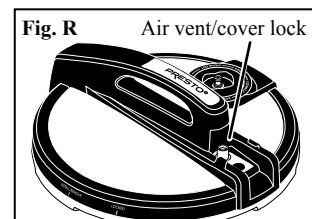

CARE AND MAINTENANCE

- When not in use, store your pressure cooker in a dry place. To prevent unpleasant odors from lingering, store the unit with the cover inverted on the cooker body.
- As is the case with all cookware, avoid chopping or cutting food inside the cooking pot with a knife or other sharp utensil. Do not use metal utensils as they may scratch the nonstick surface.
- Do not strike the rim of the cooking pot with any cooking utensil. This could damage the rim which may allow steam to escape and prevent the pressure cooker from sealing.
- The sealing ring and gasket for the air vent/cover lock may shrink, become hard, deformed, cracked, or torn with normal use. When this happens, replace the sealing ring and/or the air vent/cover lock gasket. This is routine replacement and not covered under the warranty.

Leakage between the cover and cooker body is usually caused by deterioration of the sealing ring after prolonged use.

- Periodically check the vent pipe nut for looseness. If necessary, retighten with a 1/2" wrench.
- If for any reason the pressure cooker cannot be opened, contact the Consumer Service Department in Eau Claire, WI at 1-800-877-0441 for assistance.
- Any maintenance required for this product, other than normal household care and cleaning, should be performed by the Presto Factory Service Department (see page 28).

HELPFUL HINTS

- Your favorite recipes may be adjusted for cooking in the pressure cooker by following the general directions in this manual. Use the included timetables and recipes as a guide for specific foods and cooking times. There is very little evaporation during pressure cooking, so the amount of liquid used should be decreased. A minimum of 2 cups of water or cooking liquid should always be used for pressure cooking.

Of course, the easiest way to adapt your favorite conventional recipe is to find a similar recipe for pressure cooking in this book and use it as a guide.

- Use the cooking rack when it is desirable to cook foods out of the cooking liquid. When foods are pressure cooked out of the liquid, flavors will not intermingle. Therefore, it is possible to cook several foods at once, as long as they have similar cooking times. If it is desirable to blend flavors, do not use the cooking rack.
- Many different cooking liquids can be used in a pressure cooker. Wine, beer, broth, fruit juices, and water all make excellent cooking liquids.
- It is the size and shape of the food pieces, rather than the quantity, that affects pressure cooking time. For example, 1 potato will have the same cooking time as 6 potatoes of similar size. It is important to note the size of the food specified in the cooking timetables; if the pieces of food being cooked are of a size different than those noted, it will be necessary to adjust the cooking time.
- If you have any questions on recipes, cooking times, or the operation of your pressure cooker, call our Test Kitchen at 1-800-368-2194 or contact us via our website www.GoPresto.com.

*Scotch-Brite and Dobie are registered trademarks of 3M Company. Presto is not affiliated with 3M Company.

QUESTIONS AND ANSWERS

- 1. Sometimes when pressure cooking, I notice beads of moisture forming in the area of the pressure release valve and hear what sounds like escaping steam before the timer begins to count down. Is there something I am doing wrong?**

No. Both are normal and can be expected as part of pressure cooking.

- 2. I accidentally selected the wrong program and pressed the start button and the cooker is not allowing me to select the right program. What can I do?**

Press the cancel button. This will enable you to start over and select the correct program.

- 3. When I try to adjust the time, nothing happens. What should I do?**

Press the cancel button and begin again by selecting the desired program. Then press the control knob once and adjust the time as needed.

- 4. I can see steam escaping from around the cover. Why?**

The sealing ring was not positioned on the sealing ring frame or the sealing ring frame was not installed in the cooker cover.

NOTICE: If either of these parts are not in place during cooking, the cooker will leak, pressure will not build, and you may damage the unit.

Leakage may also occur if the sealing ring needs to be replaced. The sealing ring may shrink, become hard, deformed, cracked, or torn with normal use. When this happens, replace the sealing ring before using the unit again for pressure cooking.

- 5. I can hear steam venting from the quick pressure release valve and pressure is not building. Why?**

The quick pressure release valve is in the *STEAM OUT* position. The quick pressure release valve must be in the *COOK* position in order for pressure to build and the cooker to seal.

- 6. It appears from the display that cooking is taking place, but the air vent/ cover lock is not up and I can hear steam venting. Why?**

The gaskets are either missing or improperly positioned on the air vent/cover lock and/or the sensor. This will prevent the pressure cooker from building pressure. Refer to page 9 for instructions on positioning the gaskets. If one of the gaskets is missing, contact our Consumer Service Department. Call weekdays 8:00 AM to 4:00 PM (Central Time) at 1-800-877-0441 or email us through our website at www.GoPresto.com/contact.

- 7. What does it mean when E3 appears in the display window and the unit stops working?**

The cooker has overheated. You likely operated the unit in pressure cooking mode with insufficient or no liquid. If this occurs, unplug the unit and allow it to cool. Then remove the cover and add liquid to the cooker. Plug the unit back in, place the cover on, and reprogram the cooker.

- 8. What does it mean when E1, E2, E4, or E5 appear in the display window and the unit stops working?**

Something internally has become damaged, been tampered with, or is defective. The unit will be inoperable if you get one of these codes. You should unplug the unit and contact our Consumer Service Department. Call weekdays 8:00 AM to 4:00 PM (Central Time) at 1-800-877-0441 or email us through our website at www.GoPresto.com/contact.

- 9. Occasionally the cover is hard to open. What causes this? What should I do?**

If the cover seems difficult to open, there may still be pressure in the cooker. **Verify the air vent/cover lock has dropped before trying to open the cooker.**

Be sure you have unlocked the green locking latch and lifted the temperature sensor arm away from the cover. The cover will not open if the temperature sensor arm is still positioned in the cover.

If the cover rotates but it seems to catch on the rim of the body, you are not lifting the cover straight up off the cooker body.

- 10. Sometimes my food is not completely done after the recommended cooking time. When I try to put the cover back on the cooker, so I can cook it longer, the cover will not close. How can I get the cover closed?**

Allow the pressure cooker to cool slightly. When the cooker is still hot, the air vent/cover lock will lift, preventing you from closing the cover. Before placing the cover back on, be sure the quick pressure release valve is in the *STEAM OUT* position. Once the cover is closed, move the lever to the *COOK* position.

- 11. What can be done after pressure cooking if the food has more liquid than desired?**

With the cover removed, select the SAUTÉ function, press the start button, and allow the excess liquid to evaporate. Next time you prepare the same recipe, you may want to use less liquid.

12. I believe I am thoroughly cleaning my cooker, but sometimes I notice the odor of my last meal remains in the cooker. What can I do to remove the odor?

The sealing ring is made of silicone. Silicone has many wonderful properties but it does tend to retain odors. Unfortunately, there is no good way to remove the odors, but over time they will dissipate.

13. I live at a high altitude and normally need to adjust my pressure cooking times. What adjustments should I make with this pressure cooker?

No adjustments are needed. The temperature sensor automatically assures the correct temperature is maintained for precise cooking no matter where you live.

PRESSURE COOKING RECIPES

Soups and Stews

This pressure cooker is perfect for preparing delicious soups and stews. Included are a few favorite recipes. If you have a favorite recipe of your own, try it using one of the recipes in this book as your guide. If adding dry beans and peas, they first must be soaked according to the directions on page 20.

CAUTION! Do not pressure cook soups or soup mixes containing barley, rice, pasta, grains, or split peas because they have a tendency to foam, froth, and sputter and could block the vent pipe. These foods should be added to the soup AFTER pressure cooking.

FOR SOUPS AND STEWS, DO NOT FILL COOKING POT OVER ½ FULL!

Classic Chicken Soup

- 3½ pounds bone-in chicken breasts, skinned**
- 3 cups coarsely chopped celery**
- 3 cups coarsely chopped onion**
- 6 cloves garlic, smashed**
- 1 bay leaf**
- 2 teaspoons dried thyme**
- 2 teaspoons salt**
- 1 teaspoon black peppercorns**
- 10 cups water**
•••••
- 3 cups sliced carrots**
- 2 cups sliced celery**
•••••
- 6 ounces thin egg noodles**
- 4 green onions, thinly sliced**

Add chicken, celery, onion, garlic, bay leaf, thyme, salt, peppercorns, and water to cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the SOUP function, adjust time to 8 minutes, and press start.

When time is up, use natural pressure release. Press cancel.

Remove chicken to a cutting board and allow to cool. Strain stock by pouring through a large sieve; discard solids. Return stock to cooking pot; add carrots and celery. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES-HIGH function, adjust time to 3 minutes, and press start.

Meanwhile, remove chicken from bones and cut into bite-size pieces.

When cooking time is up, quickly release pressure. Return chicken to cooking pot and add egg noodles. Place cover on cooker but do not rotate to close. Allow noodles to heat for 10 minutes or until tender. Stir in green onions.

15 servings (serving size 1 cup)

Hearty Vegetable Beef Soup

- 3 pounds beef stew meat, cut into 1-inch cubes**
- 2 tablespoons vegetable oil**
- 2 (14.5-ounce) cans diced tomatoes, undrained**
- 4 cups chopped cabbage**
- 3 cups sliced carrots**
- 2 cups whole kernel corn**
- 1 cup chopped onion**
- 1 cup sliced celery**
- 2 teaspoons dried oregano**
- 1 teaspoon dried thyme**
- 1 teaspoon black pepper**
- 5 cups beef broth**
•••••
- Salt**

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; brown one-half of beef at a time, removing the first batch from pot when done. Press cancel. Return first batch of beef, including juices, to cooker. Add tomatoes, cabbage, carrots, corn, onion, celery, oregano, thyme, pepper, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the SOUP function, adjust time to 5 minutes, and press start.

When time is up, use natural pressure release.

Season to taste with salt.

16 servings (serving size 1 cup)

Tuscan Bean Soup

- 3 cups dry Great Northern beans
- 2 tablespoons olive oil
- 2½ cups chopped onion
- 5 large garlic cloves, minced
- 6 cups kale, coarsely chopped
- 3 cups sliced carrots
- 1½ teaspoons dried rosemary
- ½ teaspoon dried thyme
- ½ teaspoon black pepper
- 13 cups chicken broth
-
- ¼ cup plus 1 tablespoon tomato paste
- Salt

Soak beans according to instructions on page 20.

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil, onion, and garlic. Sauté until onions are translucent. Press cancel. Add drained beans, kale, carrots, rosemary, thyme, pepper, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function and press start.

When time is up, use natural pressure release.

Stir in tomato paste until well blended. Season to taste with salt.

18 servings (serving size 1 cup)

Traditional Beef Stew

- 6 slices thick-sliced bacon, diced
- ¾ cup all-purpose flour
- 1 teaspoon salt
- 4 pounds beef stew meat, cut into 1-inch cubes
- Vegetable oil
- 4 cups beef broth
- ¼ cup plus 2 tablespoons tomato paste
- 1½ pounds small red potatoes, halved
- 8 ounces fresh mushrooms, sliced
- 3 cups sliced carrot
- 2 cups chopped onion
- 3 large cloves garlic, minced
- 1½ teaspoons dried thyme
- 3 bay leaves
-
- Salt and pepper

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add bacon; fry until crisp. Remove bacon from cooker, leaving drippings in pot. Mix flour and salt in a large bowl. Add beef and toss to coat; shake off excess flour mixture. Brown one-third of beef at a time, removing each batch from pot when done. Add oil for browning, as necessary, between batches.

Add 1 cup broth to the cooking pot. Scrape the bottom of the pot with a wooden utensil to release stuck-on browned bits of meat and flour. Add remaining broth and tomato paste; stir. Press cancel.

Return beef, including juices, and bacon to the cooker. Add potatoes, mushrooms, carrots, onions, garlic, thyme, and bay leaves. Close and secure cover. Place quick pressure release valve on vent pipe. Select the STEW function and press start.

When time is up, use natural pressure release.

Season to taste with salt and pepper.

12 servings (serving size 1½ cups)

Chicken and White Bean Chili

- 3 cups dry Great Northern beans
- 3 tablespoons olive oil
- 1½ cups chopped onion
- 1½ cups sliced carrot
- 6 cloves garlic, minced
- 2 jalapeño peppers, seeded, deveined, minced
- 2 tablespoons chili powder
- 2 teaspoons dried oregano
- ½ teaspoon ground allspice
- 2 pounds boneless, skinless chicken breasts, cut into ¾-inch pieces
- 1½ tablespoons packed brown sugar
- 1 tablespoon white wine vinegar
- 9 cups chicken broth
-
- Salt and pepper

Soak beans according to instructions on page 20.

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil, onion, carrot, garlic, jalapeño, chili powder, oregano, and allspice. Sauté for 2 minutes. Press cancel. Stir in drained beans, chicken, brown sugar, vinegar, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function and press start.

When time is up, use natural pressure release.

Season to taste with salt and pepper.

16 servings (serving size 1 cup)

Meat and Poultry

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Brown meat or poultry. Remove from cooker and press cancel. Pour liquid into cooking pot. Place meat or poultry on rack in cooker. Close and secure cover. Place quick pressure release valve on vent pipe. Select the RIBS, ROAST, STEW, or POULTRY function. Adjust the time, if necessary, according to the timetable below, and press start. Release pressure as indicated in the timetable.

Keep the following tips in mind when pressure cooking meat and poultry:

- Browning meat and poultry before pressure cooking, although not necessary, will add a richer flavor and color to the finished dish. Browning is easily done in the pressure cooker. Select the BROWN function and press start. Allow unit to preheat for 3 to 4 minutes and brown meat or poultry as desired.
- Meat and poultry can be placed on the grill or under the broiler after pressure cooking to give it last minute browning.
- Cooking time, especially for meat, will vary depending on the size and thickness of the cut, the distribution of fat and bone, and the grade and cut of meat. Because of this variability, the timetable below should be used as a general guide only.
- When cooking larger pieces of meat, such as roasts, keep in mind that thickness rather than weight is the most important factor in determining cooking time. The cooking times found in the meat and poultry timetable are for roasts that are 2 to 3 inches thick. If the roast is thicker than 3 inches, add 5 additional minutes to the cooking time.
- Cooking liquid or sauce can be thickened after pressure cooking, if desired. Select the SAUTÉ function and press start. Allow liquid to simmer for 5 to 10 minutes with the cover removed. Another option is to add a thickening agent to the liquid. Stir 1 to 2 tablespoons of flour or cornstarch into ¼ cup cold water. Select the SAUTÉ function, press start, and slowly add this mixture to the hot liquid. Stir and heat to boiling. Allow to boil for 1 minute or until desired consistency.
- Cooking meat and poultry from a frozen state should be reserved only for emergencies and considered only for smaller cuts of meat, such as chops, ribs, and steak. When cooking from frozen, add about 50% more time than indicated in the timetable.

FOR MEAT AND POULTRY, DO NOT FILL COOKING POT OVER ⅔ FULL!

Meat and Poultry Timetable

MEAT/POULTRY	PRESET PROGRAM	COOKING TIME (Minutes)	PRESSURE RELEASE METHOD
BEEF			
Brisket* or Corned Beef (5–5½ pounds)	ROAST	60–70	Natural
Chuck Roast (5–5½ pounds)	ROAST	45–50	Natural
Rump Roast (5–5½ pounds)	ROAST	60–65	Natural
Oxtail	ROAST	45–50	Natural
Shank	RIBS	22–24	Natural
Short Ribs	RIBS	27–30	Natural
Stew Meat (1-inch cubes)	STEW	5	Natural
LAMB			
Shoulder Roast (5–5½ pounds)	ROAST	45–50	Natural
Stew Meat (1-inch cubes)	STEW	5	Natural
POULTRY			
Chicken (whole, 3½–4 pounds)	POULTRY	11–12	Natural
Chicken (pieces with bone)	POULTRY	9	Natural
Chicken Breast (boneless, 5–6 ounces each)	POULTRY	6–7	Natural
Cornish Game Hen	POULTRY	8	Natural
Turkey (whole, up to 8 pounds frozen)	POULTRY	36–39	Natural
Turkey Breast (bone-in, up to 8 pounds frozen)	POULTRY	36–39	Natural

*Use lowest time for flat cut brisket. Use longest time for point cut brisket.

MEAT/POULTRY	PRESET PROGRAM	COOKING TIME (Minutes)	PRESSURE RELEASE METHOD
PORK			
Butt Roast (5–5½ pounds)	ROAST	50–55	Natural
Shoulder Arm Roast (5–5½ pounds)	ROAST	50–55	Natural
Chops (¾–1 inch thick)	RIBS	6–8	Natural
Steak (¾–1 inch thick)	RIBS	8–10	Natural
Spareribs	RIBS	17–20	Natural
Stew Meat (1-inch cubes)	STEW	5	Natural

Savory Pot Roast

- 2 tablespoons vegetable oil
- 1 (5- to 6-pound) boneless beef chuck roast
- 2 small onions, sliced
- 2 cups water
- 2 (2-ounce) cans anchovy fillets, drained and chopped
- 2 tablespoons cider vinegar
- 2 tablespoons packed brown sugar
- 18 whole peppercorns
- 2 bay leaves

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; brown roast on all sides. Remove from cooker and press cancel. Add onions to pot; select the SAUTÉ function, press start, and stir until onion is slightly softened. Remove from pot. Press cancel. Mix water, anchovies, vinegar, brown sugar, peppercorns, and bay leaves in pot. Place roast on cooking rack in pot. Arrange onions evenly on top of roast. Close and secure cover. Place quick pressure release valve on vent pipe. Select the ROAST function, adjust time to 55 minutes, and press start. When time is up, use natural pressure release. Press cancel.

If desired, select the SAUTÉ function, press start, and reduce cooking liquid to make sauce to serve with roast.

14 to 17 servings (serving size 4 ounces)

Korean Barbecued Ribs

- 2 tablespoons vegetable oil
- 6 pounds St. Louis-style pork ribs, trimmed of excess fat
- 1 cup ketchup
- ½ cup packed brown sugar
- ½ cup rice vinegar
- 4 thinly sliced green onions (about ½ cup)
- ¼ cup soy sauce
- 2 tablespoons sesame oil
- 1 tablespoon plus 1 teaspoon minced ginger
- 1 tablespoon fish sauce
- 2 cloves garlic, finely minced
- 2 teaspoons sesame seeds
- 1 teaspoon hot red pepper flakes
- ½ teaspoon black pepper
- ½ cup water

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; working in batches, brown ribs on two sides. Between batches, remove ribs to a plate. Press cancel. Whisk ketchup, brown sugar, vinegar, onions, soy sauce, sesame oil, ginger, fish sauce, garlic, sesame seeds, red pepper flakes, and black pepper in a bowl until mixed. Return ribs to the cooker. Pour water and half of the sauce over the ribs in the cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the RIBS function, adjust time to 25 minutes, and press start.

When time is up, use natural pressure release.

Remove ribs to a baking sheet. Brush ribs generously with reserved sauce. Place ribs under broiler for approximately 3 minutes or until lightly browned.

12 to 14 servings

Italian-Style Beef Shanks

- 6 beef shanks (about 5 pounds),
1¼ inches thick**
- 2 teaspoons salt**
- ½ teaspoon black pepper**
- 1 tablespoon olive oil**
- 2 medium carrots, chopped**
- 1 large onion, chopped**
- 5 cloves garlic, minced**
- 1 tablespoon tomato paste**
- ½ cup red wine**
- 1 tablespoon za'atar seasoning***
- 1 (14.5-ounce) can diced tomatoes**
••••••••
- Gremolata** (recipe below)

**Tip: Za'atar is a Middle-Eastern spice blend. If za'atar is not available, make your own using the following recipe.*

Za'atar substitute:

Combine 1¼ teaspoon dried thyme, ½ teaspoon sesame seeds, ½ teaspoon lemon zest, ¼ teaspoon dried oregano, and ¼ teaspoon salt.

Pulled Pork

- 1 tablespoon vegetable oil**
- 6 pounds boneless pork shoulder,
trimmed and cut into 3-inch pieces**
- 1 (14.5-ounce) can diced tomatoes**
- ¼ cup red wine vinegar**
- 2 medium onions, coarsely chopped**
- 6 cloves garlic**
- 2 tablespoons Worcestershire sauce**
- 2 tablespoons packed brown sugar**
- 2 tablespoons adobo seasoning**
- ¼ teaspoon black pepper**
••••••••
- ¼ cup tomato paste**

Season meat with salt and pepper. With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; brown meat on both sides. Remove from cooker and press cancel.

Add carrots, onion, garlic, and tomato paste to cooking pot; select the SAUTÉ function, press start, and sauté 3 minutes. Press cancel.

Place shanks on top of vegetables. Add wine, za'atar, and tomatoes. Close and secure cover. Place quick pressure release valve on vent pipe. Select RIBS function, adjust time to 30 minutes, and press start.

When time is up, use natural pressure release. Remove shanks and vegetables to a warm dish. Press cancel. Skim excess fat from surface of the sauce. Select the SAUTÉ function and press start. Simmer for 10 minutes or until liquid is reduced to desired consistency. Serve sauce with shanks. Top with gremolata.

6 servings

Gremolata

- ¼ cup chopped fresh parsley**
- 2 cloves garlic, minced**
- 1 tablespoon lemon zest**
- 2 teaspoons capers, chopped**

Stir parsley, garlic, zest, and capers together. Top each shank with gremolata.

6 servings

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; brown pork pieces on two sides. Press cancel. Combine tomatoes, vinegar, onion, garlic, Worcestershire, brown sugar, adobo seasoning, and pepper in blender; purée until smooth. Pour over pork. Close and secure cover. Place quick pressure release valve on vent pipe. Select the ROAST function, adjust time to 50 minutes, and press start.

When time is up, use natural pressure release. Press cancel.

Remove pork to baking sheet. Remove and discard any fat or connective tissue. Using two forks, shred meat; set aside.

Skim excess fat from surface of the sauce. Select the SAUTÉ function, stir tomato paste into sauce, and press start. Heat until sauce boils and thickens. Press cancel. Return shredded pork to cooking pot; stir until pork is evenly coated with sauce. Let stand 10 to 15 minutes until meat has absorbed most of the sauce.

20 servings (serving size ½ cup)

Ropa Vieja

- 1 (5- to 5½-pound) beef chuck roast, trimmed of excess fat
- 2 teaspoons salt
- 1 teaspoon black pepper
- 1 tablespoon vegetable oil
- 1 (14.5-ounce) can diced tomatoes
- 1 cup red wine
- 3 red peppers, thickly sliced
- 3 onions, thickly sliced
- 8 garlic cloves, sliced
- 4 bay leaves
- 1 tablespoon plus 1 teaspoon oregano
- 1 tablespoon plus 1 teaspoon ground cumin
- 1 tablespoon plus 1 teaspoon paprika
-
- 1½ cups sliced green olives
- ⅓ cup tomato paste
- 2 tablespoons vinegar

Season roast with salt and pepper. With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add oil; brown roast on all sides. Press cancel. Add tomatoes, wine, peppers, onions, garlic, bay leaves, oregano, cumin, and paprika to pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the ROAST function, adjust time to 60 minutes, and press start.

When time is up, use natural pressure release. Press cancel.

Remove meat to a baking sheet and shred with two forks. Add olives, tomato paste, and vinegar to pot and stir. Select the SAUTÉ function and press start. Heat about 10 minutes to reduce cooking liquid slightly. Return shredded beef to cooking pot and stir.

Serve with rice, if desired.

15 to 17 servings (serving size 4 ounces)

California Chicken

- 1 tablespoon olive oil
- 12 boneless, skinless chicken breasts (about 6 ounces each)
- 9 cloves garlic, sliced
- 1 cup white wine
- 1 cup chicken broth
- ¾ cup chopped, fresh Italian parsley
- 1 tablespoon dried rosemary
-
- Salt and pepper
- 1 lemon, thinly sliced

With cooking pot in cooker body, select the BROWN function and preheat cooker. Add oil; brown chicken. Press cancel. Cover chicken with garlic slices. Add wine, broth, parsley, and rosemary. Close and secure cover. Place quick pressure release valve on vent pipe. Select the POULTRY function, adjust time to 6 minutes, and press start.

When time is up, use natural pressure release.

Season to taste with salt and pepper. Garnish with lemon slices.

12 servings

Herbed Chicken Thighs

- 1 tablespoon olive oil
- 12 chicken thighs (4 to 5 ounces each), skinned
- 1½ cups chicken broth
- 1½ cups chopped onion
- ¾ cup chopped celery leaves
- 9 cloves garlic, minced
- 3 tablespoons chopped, fresh Italian parsley
- 1½ teaspoons dried oregano
- 1½ teaspoons dried basil
-
- ½ cup sliced black olives
- Salt and pepper

With cooking pot in cooker body, select the BROWN function and preheat cooker. Add oil; brown chicken. Press cancel. Add broth, onion, celery leaves, garlic, parsley, oregano, and basil to pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the POULTRY function and press start.

When time is up, use natural pressure release.

Remove chicken to a warm dish. Press cancel. Select the SAUTÉ function, add olives to liquid, and press start. Simmer for 10 minutes until liquid is reduced. Season to taste with salt and pepper. Serve sauce over chicken.

12 servings

Hard-cooked Eggs

10 to 12 large eggs

Pour 2 cups water into cooking pot. Place eggs on cooking rack in pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the POULTRY function, adjust time to 4 minutes, and press start. When time is up, wait 4 minutes and then use quick pressure release. Immediately remove eggs and place in a pan containing ice water. Allow eggs to cool 4 minutes. If not using immediately, refrigerate until ready to use.

Fish and Seafood

Fish/seafood cook very quickly under pressure, and the cooking time required is directly related to the thickness of the food. To prevent overcooking, do not cook fish/seafood that is less than ¾ inch thick. For fish/seafood more than 1 inch thick, cook for the suggested time in the timetable below and then allow the cover to remain on the pressure cooker for another minute after the air vent/cover lock has dropped.

With cooking pot in cooker body, pour 2 cups of water or other cooking liquid into the cooking pot. If using the cooking rack, position it in the cooking pot and then place fish/seafood on the rack. Close and secure cover. Place quick pressure release valve on vent pipe. Select the FISH function, adjust time as necessary, and press start. **To prevent overcooking, use the quick pressure release method after cooking fish/seafood (see page 8).**

FOR FISH AND SEAFOOD, DO NOT FILL COOKING POT OVER ⅔ FULL!

Fish and Seafood Timetable

FISH/SEAFOOD (Fresh or Thawed)	PRESET PROGRAM	COOKING TIME (Minutes)	PRESSURE RELEASE METHOD
Fish Fillets (1 inch thick)	FISH	1–2	Quick
Salmon Fillets (1 inch thick)	FISH	1–2	Quick
Shrimp (jumbo, 21–25 count)	FISH	1	Quick
Tuna Fillets (1 inch thick)	FISH	2–3	Quick

Vegetables

Pressure cooking is a preferred method for preparing vegetables. Because of the fast cooking time and super-heated steam, vegetables retain most of their natural color, texture, flavor, and nutrients.

Pour 2 cups liquid into cooking pot. Place vegetables on rack in cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES LOW or HIGH function. Adjust time, if necessary, according to the following timetable. Cook the minimum amount of time indicated in the timetable if crisper vegetables are preferred. Cook the maximum amount of time if vegetables are more mature. Press start. **To prevent overcooking, use the quick pressure release method after cooking (see page 8).**

FOR VEGETABLES, DO NOT FILL COOKING POT OVER 2/3 FULL!

Fresh Vegetable Timetable

VEGETABLE	PREPARATION	PRESET PROGRAM	COOKING TIME (Minutes)
Artichoke	Whole, 10–11 ounces	VEGGIES (HIGH)	12–14
Asparagus	Stems, cut into 1-inch pieces	VEGGIES (LOW)	0–1
Beans (green, wax)	Whole or sliced	VEGGIES (LOW)	2–3
Beets	Whole, 2½-inch diameter	VEGGIES (HIGH)	18–20
Broccoli	Florets	VEGGIES (LOW)	0–2
Brussels Sprouts	Small, 1-inch diameter	VEGGIES (LOW)	3–4
Cabbage (red, green)	Wedges, 1 inch thick	VEGGIES (HIGH)	4–5
Carrots	Baby cut ½-inch slices	VEGGIES (HIGH) VEGGIES (HIGH)	3–4 3–4
Cauliflower	Florets	VEGGIES (LOW)	2
Collards*	Leaves coarsely chopped, stems thinly sliced	VEGGIES (HIGH)	3–5
Corn-on-the-cob	Whole, 2½-inch diameter	VEGGIES (HIGH)	3–5
Eggplant	Cubed, 1–1½ inches thick Sliced, ½ inch thick	VEGGIES (LOW) VEGGIES (LOW)	2–3 2–3
Kale*	Leaves coarsely chopped, stems thinly sliced	VEGGIES (HIGH)	1–3
Parsnips (2-inch diameter)	Sliced, ½ inch thick	VEGGIES (LOW)	3–4
Potatoes (sweet)	Sliced, ½–¾ inch thick	VEGGIES (HIGH)	3–4
Potatoes (white)	Whole, 2½-inch diameter Whole, 1½-inch diameter Sliced, ¾ inch thick	VEGGIES (HIGH) VEGGIES (HIGH) VEGGIES (HIGH)	17–18 8–10 5–6
Rutabaga	Cubed or sliced, 1 inch thick	VEGGIES (HIGH)	7–8
Squash, summer (yellow, zucchini)	Sliced, ½ inch thick	VEGGIES (LOW)	0–1
Squash, winter (acorn)	Halved	VEGGIES (HIGH)	12
Squash, winter (buttercup)	Cut into 3- to 4-inch chunks	VEGGIES (HIGH)	8–9
Squash, winter (spaghetti)	Halved, crosswise	VEGGIES (HIGH)	12–13
Swiss Chard	Whole leaves	VEGGIES (LOW)	4
Turnips	Sliced or cubed, ½–¾ inch thick	VEGGIES (HIGH)	3–4

*Do not use rack; place in cooking liquid. Use 3 cups of water.

Mashed Cauliflower

- 2 cups water
- 2 large heads cauliflower, cut into florets
-
- 2 teaspoons olive oil
- ½ teaspoon salt
- ¼ teaspoon black pepper

Pour water into cooking pot. Place cauliflower on cooking rack in pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES–LOW function, adjust time to 3 minutes, and press start.

When time is up, use quick pressure release.

Remove cauliflower to a bowl and add olive oil, salt, and pepper. Mash to desired consistency.

16 servings (serving size ½ cup)

Braised Kale with Bacon

- 5 slices bacon, diced
- 1½ cups chopped onion
- 1½ bunches kale (about 25 ounces)
- 2 cups chicken broth
-
- 2 tablespoons red wine vinegar
- ½ teaspoon black pepper

With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add bacon; fry until crisp. Remove bacon from cooker, leaving drippings in pot. Press cancel. Select the SAUTÉ function, press start, and add onion; sauté until translucent. Press cancel. Return bacon to pot and add kale and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES–HIGH function, adjust time to 3 minutes, and press start.

When time is up, use quick pressure release.

Stir in vinegar and pepper.

10 servings (serving size ½ cup)

Spaghetti Squash with Marinara Sauce

- 1 tablespoon olive oil
- 1 cup chopped onion
- 2 cloves garlic, minced
- 1 (28-ounce) can crushed tomatoes
- ½ teaspoon dried basil
- ½ teaspoon salt
- ½ teaspoon sugar
- ¼ teaspoon black pepper
- ¼ teaspoon dried oregano
- 2 spaghetti squash (2 pounds each), rinsed and halved crosswise

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil and onion; sauté until translucent. Add garlic and sauté 1 minute. Press cancel. Add tomatoes, basil, salt, sugar, pepper, and oregano. Remove seeds from squash halves and discard. Place squash halves on sauce. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES-HIGH function, adjust time to 14 minutes, and press start.

When time is up, use quick pressure release.

Remove squash and scoop strands into a serving bowl. Serve with marinara sauce.

*7 to 8 servings
(serving size 1 cup squash, ½ cup marinara)*

Carrots and Parsnips

- ¼ cup butter
- 2 pounds carrots, peeled, cut into ½-inch slices
- 2 cloves garlic, minced
- 2 pounds parsnips, peeled, cut into ¾-inch slices
- 1 tablespoon lemon juice
- 1 teaspoon ground ginger
- 1 teaspoon onion powder
- 1 teaspoon salt
- 2 cups vegetable or chicken broth

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add butter and melt. Add carrots and sauté for 3 minutes. Add garlic and sauté for 30 seconds. Press cancel. Add parsnips, lemon juice, ginger, onion powder, salt, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES-LOW function, adjust time to 3 minutes, and press start.

When time is up, use quick pressure release.

20 servings (serving size ½ cup)

Seasoning options:

Instead of ground ginger, use 1 teaspoon dried sage or 1 teaspoon dried rosemary.

Ginger Vinaigrette Beets

- 12 medium beets, 2½-inch diameter
- 2 cups water
-
- ½ cup sugar
- ⅔ cup red wine vinegar
- 1 teaspoon ground ginger
- ½ teaspoon black pepper

Cut tops off beets, leaving at least 2 inches of stems. Scrub beets with soft vegetable brush, being careful to leave skin intact. Pour water into cooking pot. Place beets on cooking rack in pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the VEGGIES–HIGH function, adjust time to 19 minutes, and press start.

When time is up, use quick pressure release.

Remove beets to a cutting board and allow to cool. When beets are cool enough to handle, peel off skins and cut off root end. Cut beets into wedges.

Press cancel. Remove cooking rack and discard all but 1 cup of cooking liquid. Add sugar and vinegar. Select the SAUTÉ function, press start, and bring mixture to a boil. Allow to boil for 2 to 3 minutes. Stir in ginger and pepper. Return beet wedges to the cooker and allow to heat through.

16 servings (serving size ½ cup)

Dry Beans, Peas, and Lentils

The pressure cooker is ideal for preparing dry beans, peas, and lentils quickly. However, these foods have a tendency to froth and foam during cooking, which could cause the vent pipe to become blocked. Therefore, it is necessary to follow these procedures:

SOAKING

Soaking before pressure cooking is strongly recommended for dry beans and peas, but not lentils. Benefits of soaking include eliminating some of the water soluble starches that produce gas and create froth and foam during cooking, decreasing the cooking time, and producing beans and peas that are more evenly cooked.

Soaking can be done using the traditional or the quick-soak method.

Traditional method: Clean and rinse beans and peas; cover with three times as much water as beans or peas. Soak 8 hours to overnight.

Quick method: Clean and rinse beans or peas. With cooking pot in cooker body, add beans or peas to cooking pot. Cover with three times as much water as beans or peas. Select BROWN function, press start, and heat cooker. Bring water to a boil and boil for 2 minutes. Press cancel. Carefully lift cooking pot from cooker and place on a heat-resistant surface. Place pressure cooker cover on pot. Let stand for 1 hour.

After soaking, drain beans, rinse, and remove any loose skins.

COOKING

Place beans, peas, or lentils in cooking pot in cooker body. Cover with fresh water and **add 1 tablespoon vegetable oil** to help minimize the amount of froth and foam during cooking. **The cooking pot should never be more than ½ full with beans, peas, lentils, water, and other ingredients.**

After cooking is complete, use natural pressure release (see page 8).

**FOR DRY BEANS, PEAS, AND LENTILS,
DO NOT FILL COOKING POT OVER ½ FULL!**

Dry Beans, Peas, and Lentils Timetable

Soak beans and whole peas, according to information on page 20. Lentils do not require soaking. **Add 1 tablespoon vegetable oil to cooking liquid. DO NOT COOK SPLIT PEAS.**

Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function. Adjust time, if necessary, according to the times indicated in the timetable below and press start. **After cooking is complete, use natural pressure release (see page 8).**

NOTE: The timetable is meant to be a guide. Adjust time as necessary to produce beans you and your family prefer.

FOR DRY BEANS, PEAS, AND LENTILS, DO NOT FILL COOKING POT OVER ½ FULL!

BEANS, PEAS, AND LENTILS	COOKING TIME (Minutes)
Black Beans	3–5
Black-Eyed Peas	2–3
Chickpeas (garbanzo)	7–10
Great Northern Beans	3–6
Kidney Beans	2–4
Lentils (brown, green)*	3–4
Lima Beans (large)	2–3
Lima Beans (baby)	2–4
Navy Beans (pea)	2–4
Peas (whole yellow, green)**	7–10
Pinto Beans	4–7
Red Beans	4–7

*It is not necessary to soak.

**Do not cook split peas.

Lentil Curry

- 2 tablespoons olive oil
- 2 cups chopped onion
- 1 tablespoon ground coriander
- 1 tablespoon curry powder
- 1 teaspoon ground ginger
- 3 cups lentils
- 1 teaspoon salt
- 9 cups chicken broth

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil, onion, coriander, curry powder, and ginger; sauté for 2 minutes. Press cancel. Add lentils, salt, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function and press start.

When time is up, use natural pressure release.

12 servings (serving size ½ cup)

Savory White Beans

- 4 cups Great Northern Beans
- 2 tablespoons olive oil
- 2 cups chopped onion
- 1 tablespoon minced garlic
- 2 cups sliced carrots
- 2 small bay leaves
- 1 teaspoon salt
- 1 teaspoon dried thyme
- ½ teaspoon dried rosemary
- ½ teaspoon black pepper
- 6 cups chicken broth

Soak beans according to instructions on page 20.

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil, onion, and garlic; sauté until onions are translucent. Press cancel. Add beans, carrots, bay leaves, salt, thyme, rosemary, pepper, and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function and press start.

When time is up, use natural pressure release.

14 servings (serving size ½ cup)

Red Hot Pinto Beans

- 4 cups pinto beans
- 3 tablespoons vegetable oil
- 2 cups chopped onion
- 2 jalapeño peppers, seeded, deveined, minced
- 3 large cloves garlic, minced
- 2 tablespoons all-purpose flour
- 2 tablespoons chili powder
- 2 teaspoons ground cumin
- 1 teaspoon paprika
- 1 teaspoon salt
- 5 cups chicken broth

Soak beans according to instructions on page 20.

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil, onion, peppers, and garlic; sauté until onions are translucent. Stir in flour, chili powder, cumin, paprika, and salt. Cook 1 minute. Press cancel. Add beans and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the BEANS function, adjust time to 6 minutes, and press start.

When time is up, use natural pressure release.

18 servings (serving size ½ cup)

Grains

Grains are an important, but often little recognized, part of a healthy diet. They contribute complex carbohydrates, soluble and insoluble fiber, and other nutrients. Grains are low in fat and can be prepared quickly and conveniently with no soaking required. However, some grains foam and froth during cooking, so the following precautions should be observed.

- Do not cook more than 4 cups of grains at one time.
- After pressure cooking, use natural pressure release (see page 8).

Grains Timetable

Combine the desired grain and the amount of liquid (water or broth) indicated in the timetable below in the cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the RICE or MULTIGRAIN function, adjust time as necessary, and press start.

Before serving, separate the grains by lifting gently with a fork while steaming. It may be necessary to allow excess moisture to evaporate from some grains. If excessive moisture remains, drain before using grains.

FOR GRAINS, DO NOT FILL COOKING POT OVER ½ FULL!

GRAINS (Qty: 4 cups)	CUPS OF LIQUID PER 4 CUPS OF GRAIN	PRESET BUTTON	COOKING TIME (Minutes)
Amaranth	7	MULTIGRAIN	1–2
Barley (hull-less)*	7	MULTIGRAIN	3–5
Barley (pearl)*	8	MULTIGRAIN	4–6
Buckwheat	7	MULTIGRAIN	1–2
Farro (pearl)	7	MULTIGRAIN	2–4
Millet	7	MULTIGRAIN	1–2
Oats (steel cut)	6	MULTIGRAIN	2–4
Rice (brown)	6	RICE	7–9
Rice (white)	6	RICE	1–2
Sorghum	7	MULTIGRAIN	17–20
Wheat Berries	6	MULTIGRAIN	17–20
Wild Rice	5	MULTIGRAIN	12–14

*Add 1 to 2 tablespoons of vegetable oil.

Wild Rice with Raisins and Pecans

- 2 tablespoons vegetable oil
- 2 medium onions, finely chopped
- 4 cups wild rice
- 5 cups beef broth
-
- 2 cups golden raisins
- 2 cups pecans, toasted

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil and onions; sauté until translucent. Press cancel. Add wild rice and broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the MULTIGRAIN function, adjust time to 13 minutes, and press start.

When time is up, use natural pressure release.

Stir in raisins and pecans; allow to steam for 5 minutes.

20 servings (serving size 2/3 cup)

Herbed Jasmine Rice

- 3 tablespoons butter
- 1 cup chopped onion
- 4 cups jasmine rice
- 1 teaspoon dried marjoram
- 1 teaspoon dried thyme
- 1/2 teaspoon dried rosemary
- 6 cups chicken broth
-
- 1 cup chopped walnuts

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add butter and melt. Add onion; sauté until tender. Add rice, marjoram, thyme, and rosemary; stir to coat the rice. Press cancel. Add broth. Close and secure cover. Place quick pressure release valve on vent pipe. Select the RICE function and press start.

When time is up, use natural pressure release.

Stir in walnuts.

20 servings (serving size 2/3 cup)

Barley Salad with Fruits, Walnuts, and Blue Cheese

- Pickled Red Onion (recipe below)
- 2 cups pearl barley
- 4 cups water
- 1 tablespoon vegetable oil
-
- 2/3 cup dried cranberries
- 1/3 cup olive oil
- 1/3 cup pomegranate molasses*
- 2 tablespoons clementine orange zest
- 2 tablespoons water
- 1 teaspoon curry powder
- 1 teaspoon salt
- 1/2 teaspoon black pepper
-
- 4 clementine oranges, peeled and sliced crosswise
- 2 cups arugula
- 1/2 cup pomegranate seeds
- 1/2 cup Pickled Red Onion
- 1/2 cup crumbled blue cheese
- 1/2 cup walnut pieces, toasted

Prepare Pickled Red Onion; reserve.

Add barley, water and oil to cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Select the MULTIGRAIN function, and press start.

When time is up, use natural pressure release.

Spread barley on baking sheet to cool slightly. Add cooled barley and cranberries to a large bowl. Whisk oil, pomegranate molasses, zest, water, curry powder, salt, and pepper in a small bowl. Pour over barley mixture and toss to coat.

Arrange barley on serving platter. Arrange oranges, arugula, pomegranate seeds, and Pickled Red Onion in separate rows over the barley. Sprinkle blue cheese and walnuts over entire platter.

8 servings

*Pomegranate molasses substitute:

Boil sweetened pomegranate juice in a small saucepan to reduce to a honey-like consistency.

Pickled Red Onion

- 1/3 cup distilled white vinegar
- 1/4 cup sugar
- 1 tablespoon salt
- 1/2 cup thinly sliced red onion

Mix vinegar, sugar, and salt in a small bowl. Add onion. Refrigerate at least one hour or up to 24 hours.

Makes 1/2 cup

Desserts

There are some desserts that the pressure cooker does remarkably well: custards, puddings (especially bread pudding), and cheesecake. These desserts may be prepared in oven-safe custard cups, ramekins, or any oven-safe mold or form which will fit loosely in the cooking pot. This pressure cooker will hold a 9-inch springform pan or up to 8 ramekins, depending on their shape and size. Fill molds $\frac{2}{3}$ full and cover the top securely with aluminum foil. Place the mold or ramekins on the cooking rack in the cooking pot. To position more than 4 ramekins in the cooking pot, you will need to place 4 of the ramekins on the cooking rack and then position the remaining ramekins on top of the first layer, making sure to stagger the top layer.

Do not cook applesauce, cranberries, or rhubarb in the pressure cooker.

FOR DESSERTS, DO NOT FILL COOKING POT OVER $\frac{2}{3}$ FULL!

Custard

- 4 eggs, beaten**
- $\frac{1}{3}$ cup sugar**
- 1 teaspoon vanilla extract**
- $\frac{1}{2}$ teaspoon salt**
- 3 cups milk**
- 2 cups water**

Mix eggs, sugar, vanilla, and salt in a medium bowl. Add milk and mix well. Pour $\frac{1}{2}$ cup of the custard mixture into each of eight 5-ounce ramekins. Cover the top of each ramekin securely with aluminum foil. Add water and cooking rack to cooking pot. Place four of the ramekins on the cooking rack and then stack the remaining ramekins opposite the bottom layer of ramekins. Close and secure cover. Place quick pressure release valve on vent pipe. Select the DESSERTS function, adjust time to 7 minutes, and press start.

When time is up, use quick pressure release.

Remove ramekins to cool on a wire rack. Refrigerate until chilled.

8 servings

Variations:

Coconut Custard

Follow the custard directions above but, before pouring custard mixture into ramekins, place 1 tablespoon of shredded coconut into each of the ramekins.

Chocolate Custard

Follow the custard directions, mixing eggs, sugar, vanilla, and salt. Then heat milk and 2 ounces of grated baking chocolate just until chocolate is melted. Allow to cool slightly and then add to the egg mixture. Follow the rest of the custard directions.

Orange Cheesecake

- 1 (11-ounce) can mandarin oranges, well drained**
- 20 ounces cream cheese (2½ eight-ounce packages)**
- $\frac{3}{4}$ cup sugar**
- 3 eggs**
- $\frac{3}{4}$ cup crushed vanilla wafers**
- 2 cups water**

Cut aluminum foil to fit bottom of 9-inch springform pan. Place foil into pan and lightly grease foil. Decoratively arrange orange sections on prepared bottom of springform pan.

Beat cream cheese until smooth using an electric mixer. Beat in sugar. Beat in eggs, one at a time. Pour mixture over orange sections. Sprinkle top with vanilla wafers. Cover pan with aluminum foil and secure around the rim of the pan (do not wrap the entire pan).

Add water and cooking rack to cooking pot. Place pan on cooking rack. Close and secure cover. Place quick pressure release valve on vent pipe. Select the DESSERTS function, adjust time to 40 minutes, and press start.

When time is up, use quick pressure release.

Remove pan and cool on wire rack. Refrigerate 4 hours or overnight. Loosen edges. Position a large plate upside down over pan; turn plate and pan over. Remove side of springform pan, remove bottom of pan, and carefully pull off foil.

12 servings

Petite Pumpkin Custards

- 1 (15-ounce) can solid-pack pumpkin
- 1 (14-ounce) can sweetened condensed milk
- 3 eggs, beaten
- 1 teaspoon ground cinnamon
- 1 teaspoon chopped candied ginger or ½ teaspoon ground ginger
- ¼ teaspoon ground cloves
- 2 cups water
••••••
- Whipped cream (optional)

Mix pumpkin, milk, eggs, cinnamon, ginger, and cloves in a medium bowl. Pour into eight 5-ounce ramekins. Cover each securely with aluminum foil.

Add water and cooking rack to cooking pot. Place four ramekins on cooking rack. Then, stack the other four ramekins opposite the bottom four ramekins. Close and secure cover. Place quick pressure release valve on vent pipe. Select the DESSERTS function, adjust time to 13 minutes, and press start.

When time is up, use quick pressure release.

Remove ramekins to cool on wire rack. Refrigerate until chilled. Serve with whipped cream.

8 servings

Cinnamon Raisin Bread Pudding with Rum Sauce

- Rum Sauce (recipe below)
- 1 (12-ounce) can evaporated milk
- 3 eggs
- ¼ cup sugar
- ½ teaspoon ground cinnamon
- ¼ teaspoon ground nutmeg
- 5 cups French bread, cut into 1-inch cubes
- 1 cup raisins
- 2 teaspoons butter, divided
- 2 cups water

Prepare Rum Sauce.

Grease a 1½ quart bowl or soufflé dish with 1 teaspoon of the butter. Grease a piece of aluminum foil that will fit over the rim of the bowl with the remaining butter.

Whisk milk, eggs, sugar, cinnamon, and nutmeg in a large bowl until frothy. Stir in bread and raisins, pushing down cubes to make sure some of the mixture is absorbed by the bread. Pour mixture into the prepared bowl. Cover with the prepared foil, buttered side down, and secure around the rim of the baking dish (do not wrap the entire baking dish). Add water and cooking rack to cooking pot. Place baking dish on cooking rack. Close and secure cover. Place quick pressure release valve on vent pipe. Select the DESSERTS function, adjust time to 32 minutes, and press start.

When time is up, use quick pressure release.

Remove dish from cooker; remove foil. Stir and serve warm or at room temperature with rum sauce.

6 to 8 servings

Rum Sauce

- ½ cup butter
- ½ cup sugar
- ⅓ cup heavy whipping cream
- 1 tablespoon light corn syrup
- 2 tablespoons rum

Heat butter, sugar, cream, and corn syrup in a medium sauce pan over low heat until butter melts and sugar dissolves, about 10 minutes. Cook over medium heat and boil gently for 2 minutes, stirring occasionally. Remove from heat and add rum. Serve warm or at room temperature over bread pudding.

SLOW COOKING RECIPES

Due to the nature of slow cooking, meat does not brown as it would if cooked in a skillet or oven. It is not necessary to brown meat or poultry before slow cooking, but you may prefer the flavor and appearance of browned meat.

Browning ground beef, bacon, and sausage before slow cooking may be desirable to remove excess fat.

Avoid removing the cover during slow cooking because it will result in significant loss of heat and steam. If you must open the cover to check on cooking progress, do so quickly.

Some dense and crisp vegetables like carrots, potatoes, and turnips take longer to cook than meat, so cut vegetables into smaller pieces when adding to meat dishes.

IMPORTANT: When slow cooking, place the quick pressure release valve on the vent pipe in the *STEAM OUT* position.

Southwest Chicken Soup

- | | |
|---|--|
| <ul style="list-style-type: none">8 boneless, skinless chicken breasts, cooked and shredded2 (16-ounce) cans pinto beans, drained2 (14.5-ounce) cans diced tomatoes2 cups whole kernel corn2 (4-ounce) cans chopped green chilies*2 cups chopped onion2 red peppers, cut into ½-inch pieces2 jalapeño peppers, chopped4 cloves garlic, minced2 tablespoons chili powder2 teaspoons cumin4 cups chicken broth2 (28-ounce) cans enchilada sauce••••••Avocado slices for servingTortillas chips for serving | <p>Add chicken, beans, tomatoes, corn, chilies, onion, peppers, garlic, chili powder, cumin, broth, and enchilada sauce to cooking pot. Close and secure cover. Place quick pressure release valve on vent pipe. Turn lever to <i>STEAM OUT</i> position for slow cooking.</p> <p>Select the SLOW COOK–LOW function and press start. Cook for 7 to 8 hours.</p> <p>Or select the SLOW COOK–HIGH function and press start. Cook for 3 to 5 hours.</p> <p>Serve with avocado slices and tortilla chips.</p> <p><i>24 servings (serving size 1 cup)</i></p> |
|---|--|

**For spicier soup, use one (7-ounce) can chipotle peppers in adobe sauce in place of the green chilies.*

Fire Fighter's Chili

- | | |
|---|--|
| <ul style="list-style-type: none">1½ pounds ground mild or hot Italian sausage1½ pounds lean ground beef1 cup chopped onion6 cloves garlic, minced3 (28-ounce) cans diced tomatoes3 (16-ounce) cans pinto beans, drained1½ cups dry red wine1½ cups beef broth1 cup Worcestershire sauce¼ cup plus 2 tablespoons chili powder*3 tablespoons honey1 teaspoon hot red pepper flakes1 teaspoon celery seed1 teaspoon hot sauce••••••Salt and pepper | <p>With cooking pot in cooker body, select the BROWN function, press start, and preheat cooker. Add sausage and ground beef. Cook until browned. Press cancel and remove meat from pot. Pour off excess drippings, reserving 1 tablespoon in pot.</p> <p>Select the SAUTÉ function and press start. Add onion and garlic; sauté 1 minute. Return sausage and ground beef to pot and add tomatoes, beans, wine, broth, Worcestershire, chili powder, honey, red pepper flakes, celery seed, and hot sauce. Close and secure cover. Place quick pressure release valve on vent pipe. Turn lever to <i>STEAM OUT</i> position for slow cooking. Select the SLOW COOK–LOW function and press start. Cook for 8 to 10 hours.</p> <p>Or select the SLOW COOK–HIGH function and press start. Cook for 6 to 7 hours.</p> <p>Season to taste with salt and pepper.</p> <p><i>21 servings (serving size 1 cup)</i></p> |
|---|--|

**For spicier chili, increase chili powder as desired.*

Apricot Barbecue Pork Chops

- 3 tablespoons vegetable oil
- 3 cups chopped onion
- ¾ cup teriyaki sauce
- ¾ cup ketchup
- ¾ cup apricot preserves
- ½ cup cider vinegar
- ½ cup packed brown sugar
- 1½ teaspoons hot red pepper
- 1½ teaspoons dry mustard
- 1 teaspoon black pepper
- 12 boneless pork chops, 1 inch thick

With cooking pot in cooker body, select the SAUTÉ function, press start, and preheat cooker. Add oil; sauté onion until translucent. Press cancel. Combine teriyaki sauce, ketchup, preserves, vinegar, brown sugar, red pepper, mustard, and black pepper in a small bowl. Place pork chops in the cooking pot on top of the onions. Pour barbecue sauce over chops. Close and secure cover. Place quick pressure release valve on vent pipe. Turn lever to *STEAM OUT* position for slow cooking. Select the SLOW COOK—LOW function and press start. Cook for 6 to 7 hours.

12 servings

RECIPE INDEX

Pressure Cooking

Soups and Stews

Chicken and White Bean Chili	12
Classic Chicken Soup	11
Hearty Vegetable Beef Soup	11
Traditional Beef Stew	12
Tuscan Bean Soup	12

Meat, Poultry, and Eggs

California Chicken	16
Hard-cooked Eggs	17
Herbed Chicken Thighs	16
Italian-Style Beef Shanks	15
Korean Barbecued Ribs	14
Meat and Poultry Timetable	13
Pulled Pork	15
Ropa Vieja	16
Savory Pot Roast	14

Fish and Seafood

Fish and Seafood Timetable	17
--------------------------------------	----

Vegetables

Braised Kale with Bacon	19
Carrots and Parsnips	19
Fresh Vegetable Timetable	18
Ginger Vinaigrette Beets	20
Mashed Cauliflower	19
Spaghetti Squash with Marinara Sauce	19

Dry Beans, Peas, and Lentils

Dry Beans, Peas, and Lentils Timetable	21
Lentil Curry	21
Red Hot Pinto Beans	22
Savory White Beans	21

Grains

Barley Salad with Fruits, Walnuts, and Blue Cheese	23
Herbed Jasmine Rice	23
Grains Timetable	22
Wild Rice with Raisins and Pecans	23

Desserts

Chocolate Custard	24
Cinnamon Raisin Bread Pudding with Rum Sauce	25
Coconut Custard	24
Custard	24
Orange Cheesecake	24
Petite Pumpkin Custards	25

Slow Cooking

Apricot Barbecue Pork Chops	27
Fire Fighter's Chili	26
Southwest Chicken Soup	26

CONSUMER SERVICE INFORMATION

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8:00 AM to 4:00 PM (Central Time)
- Email us through our website at www.GoPresto.com/contact
- Write: National Presto Industries, Inc., Consumer Service Department
3925 North Hastings Way, Eau Claire, WI 54703-3703

Inquiries will be answered promptly by email, telephone, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

When contacting the Consumer Service Department or when ordering replacement parts, please indicate the model and series numbers for the pressure cooker. The model number can be found on the back of the cooker body and the series number can be found on the bottom of the cooker body.

Please record this information:

Model _____ Series _____ Date Purchased _____

The Presto Factory Service Department is equipped to service Presto® appliances and supply genuine Presto® parts. Genuine Presto® replacement parts are manufactured to the same exacting quality standards as Presto® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine Presto® parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine Presto® replacement parts, look for the Presto® trademark.

Canton Sales and Storage Company, Presto Factory Service Department,
555 Matthews Dr., Canton, MS 39046-3251

Product Registration

IMPORTANT: Please go online and register this product within ten days of purchase. Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost. Registration will not affect warranty coverage, but may expedite the processing of warranty claims. The additional information requested will help us develop new products that best meet your needs and desires. To register the product, visit www.GoPresto.com/registration or simply scan this QR code. If you do not have computer access, contact the Consumer Service Department at 1-800-877-0441.



Presto® Limited Warranty

(Applies only in the United States)

This quality Presto® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to normal wear and tear including scratches, dulling of the polish, or staining; the repair or replacement of moving and/or perishable parts such as the sealing ring, quick pressure release valve, or air vent/cover lock gasket; or for any damage caused by shipping. **Outside the United States, this limited warranty does not apply.**

To obtain service under the warranty, please call our Consumer Service Department at 1-800-877-0441. If unable to resolve the problem, you will be instructed to send your Presto® appliance to the Presto Factory Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance as well as a description of the problem you are encountering with the appliance.

We want you to obtain maximum enjoyment from using this Presto® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, disassembly, alterations, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

National Presto Industries, Inc.
Eau Claire, WI 54703-3703