 


PRESTO®

4-in-One Electronic Clock/Timer

- Four functions in one compact unit: timer, stopwatch, calendar, and clock.
- Four timers in one, too! Times as many as four activities at once.
- Times up to 24 hours in timer or stopwatch mode.
- Calendar displays day and date to the year 2099.

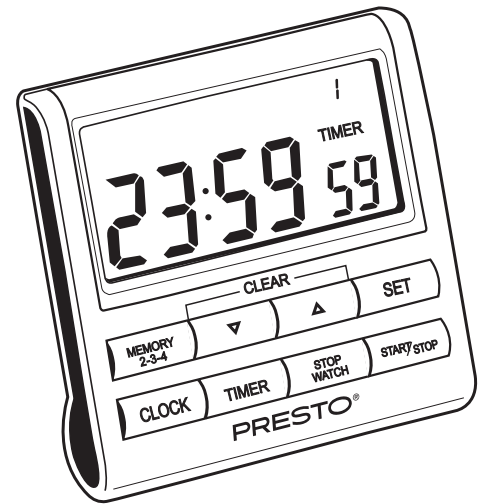

Visit us on the web at www.GoPresto.com

INSTRUCTIONS

©2003 by National Presto Industries, Inc.

Insert Battery Before Using:

Remove the battery compartment cover on the back of the unit (Fig. 1) by placing your fingernail in the groove at the top right corner of the cover and pull the cover off. Insert one AAA battery into compartment matching the + and - symbols as indicated in the battery compartment. Slide cover down over battery, making sure it locks in place.

To Set Calendar/Clock:

The **CLOCK** button is used to alternate between 12 hour (AM/PM) and 24 hour (International/Military time) clock modes. When you insert the battery, the clock will automatically be in the 12 hour clock mode. If you would like the clock in the 24 hour clock mode press **CLOCK** before setting the clock. The letters AM or PM will appear for the 12 hour clock only.

To set the calendar/clock, first press the **SET** button to adjust the settings. When **SET** is pressed, the flashing figures will display in the following sequence: year, month, date, hours, minutes, seconds. Press the ∇ or Δ buttons to change the calendar or the clock. The ∇ button will decrease the numbers and the Δ button will increase the numbers. (Note: The day of the week will automatically change when you change the date.)

To Use Stopwatch: (Times up to 23 hours, 59 minutes, 59 seconds)

Press the **STOP WATCH** button to enter the count-up/stopwatch mode. Press the **START/STOP** button to begin counting up in seconds. Press **START/STOP** again to stop time. Press again to restart. After you stop the time, press the ∇ and Δ buttons at the same time to clear the time and reset to 00:00.

Your timer can time up to four activities at once, if desired. The maximum time for each being 23 hours, 59 minutes, 59 seconds.

To Use THE BASIC Timer (TIMER 1):

First press the **TIMER** button to enter the timer mode. The number 1 will be displayed in the upper right corner of the timer. Then press **SET** and using the ∇ and/or Δ buttons, set desired timing period (hours, minutes, and seconds). Next press **START/STOP** to begin timing. Any time during the timing period the timer can be stopped by pressing **START/STOP**. Press **START/STOP** again to restart. Once time elapses, alarm will sound for 60 seconds. Timer will count up to show how much time has elapsed since the timer sounded. Press **START/STOP** to stop the tone and count-up time and reset to 00:00.

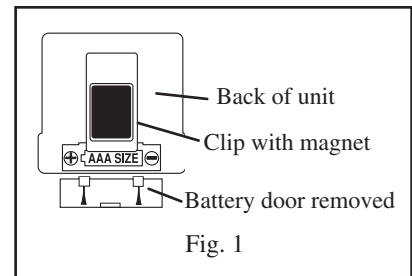 


Fig. 1

To Use MEMORY timers 2, 3, and 4:

First press **TIMER** to enter the timer mode. Then press the **MEMORY 2-3-4** button. Each time you press **MEMORY 2-3-4**, a different number will appear in the upper right corner of the timer. That number indicates which timer is being used. Press **SET** and using the ∇ and Δ buttons set desired timing period for each timer.

When you set timers 2, 3, and 4, the times will automatically be stored. To reset any of the stored times, press the ∇ and Δ buttons at the same time and this will erase the time in memory.

 
Memory Recall:

To recall a stored time after the time has expired, first make sure you are in the timer mode, then press **MEMORY 2-3-4** until the correct timer is displayed.

Note: Timer 1 is a basic timer and does not include the memory recall feature.

Clip/Stand:

Your clock/timer has a spring loaded clip on the back (Fig. 2), so you can clip it onto clothing or other things. The clip converts to a stand by pressing down on top of the clip (above magnet) and pulling the wire brace down to form an easel.

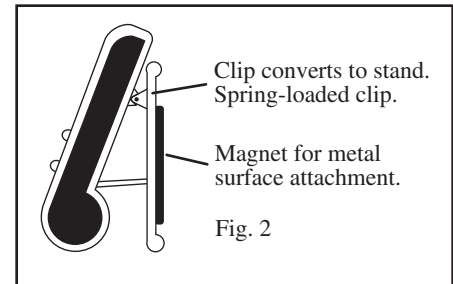

SERVICE INFORMATION

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, call our Consumer Service Department weekdays between 8:00 AM and 4:30 PM (Central Time) at 715-839-2209 or write:

National Presto Industries, Inc.
Consumer Service Dept., 3925 North Hastings Way, Eau Claire, WI 54703-3703

You may also email inquiries to contact@GoPresto.com. Inquiries will be answered promptly by telephone, letter, or email. When writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning should be performed by our Factory Service Department or any Presto Authorized Service Station. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair. Send appliances for repair to:

Canton Sales and Storage Company
Presto Factory Service Dept., 555 Matthews Drive, Canton, MS 39046-0529

Appliances may also be repaired at any Presto Authorized Service Station. Check your yellow pages for Service Stations near you. The Presto Factory Service Department and Presto Authorized Service Stations are equipped to service all PRESTO® appliances and supply genuine PRESTO® parts. Genuine PRESTO® replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine Presto® parts. "Look-alikes" might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO® replacement parts, look for the PRESTO® trademark.

California residents seeking warranty or service information may call 1-800-877-0441.

Presto® Limited Warranty

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first two years after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the Factory Service Department or to the nearest Presto Authorized Service Station. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC.
Eau Claire, WI 54703-3703