

Digital Clock/Timer with Whiteboard Operating Instructions

Before Use

Remove the battery compartment cover on the back of the timer (Fig. B). Press the latch towards the cover and lift it off. Install two AAA batteries matching the + and - symbols as indicated in the compartment. Replace compartment cover. Remove the static cling labels from the display and whiteboard (Fig. A).

Getting Acquainted

This clock/timer has four handy functions; a clock and three timers in one (Fig. A). There is also a built-in whiteboard with dry erase marker.

Important: Use only dry erase markers on this unit. Do not use permanent marker. Store the dry erase marker in the marker holder on the back of the timer (Fig. B).

On the back of the clock/timer are a sound switch and a light switch (Fig. B). When you want an audible alarm and/or a flashing light to alert you when time has expired, these switches must be turned on. The alarm will sound and the light will flash for five minutes when the programmed time is up, unless you press **ST/SP/SET**.

Note: If the sound switch is on, you will hear a beep any time a button is pressed on the clock/timer. If you do not want to hear the beeping sound, slide the switch to the off position.

The **EVENT** button controls all the functions of the clock/timer. Each time you press the **EVENT** button, an icon (**TIME**, **T1**, **T2**, or **T3**) appears on the left side of the display window and begins to flash. The flashing icon indicates the event currently selected.

Note: The unit can only be set when one of the icons (**TIME**, **T1**, **T2**, or **T3**) is flashing.

In the display window **H** stands for hours, **M** stands for minutes, and **S** stands for seconds.

When you first put the batteries in the clock/timer, **M** and **S** will appear in the three timer displays, as shown in Fig. C.

For information on setting the clock and operating the timers, read the following instructions.

To Set Clock (24 Hour System)

1. Press the **EVENT** button 1 to 4 times until the **TIME** icon flashes in the display window.
2. Press and hold the **ST/SP/SET** button for approximately 4 seconds until the digits flash. Then press **H/M** to set the hours and **M/S** to set the minutes. To advance the time rapidly, press and hold the button. There is no **AM** indicator, just **PM**. When the time has been set, press **ST/SP/SET** to start the clock.

To switch between the 12 hour (International Time) and 24 hour clock (Military Time) modes, press **ST/SP/SET** and then immediately press **H/M** or **M/S**. **Note:** The **TIME** icon must be flashing in order to do this.

To Use Timers (T1, T2, T3)

Three different timers can be operated at the same time, each up to 23 hours and 59 minutes.

To Operate Timers In Count Down Mode:

1. Press the **EVENT** button to select any of the timers. Once the **T1**, **T2**, or **T3** icon is flashing, you can program the timer.
2. **To set seconds**, press the **M/S** button.

To set minutes, press the **H/M** button.

To set hours, press and hold the **H/M** button. After you reach 59, the minutes will switch to hours and the seconds will switch to minutes. The **M** and **S** icons in the display window will disappear and **H** and **M** icons will appear to the bottom right of the numbers. Once you have programmed the desired hours, press the **M/S** button to program the desired minutes.

To advance the numbers rapidly, press and hold the buttons.

3. Press **ST/SP/SET** to begin timing. Be sure you have the sound switch and/or light switch turned on, so you will know when the time has expired. To temporarily stop timing, be sure the correct timer is selected and then press **ST/SP/SET**. To restart, press **ST/SP/SET** again.

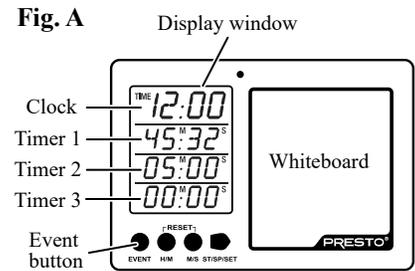


Fig. B

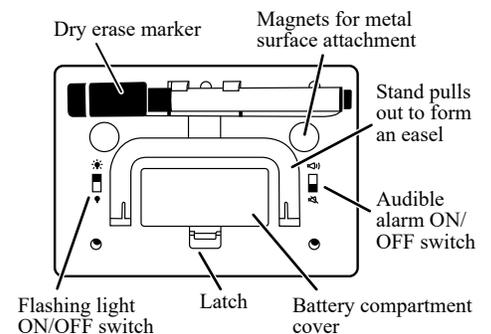


Fig. C



4. When time is up, the alarm will sound and/or the light will flash. The timer will also begin to count up to tell you how much time has passed since the alarm sounded. During count up, the timer digits flash.

Timer 1 (**T1**) alarm sounds in two beep intervals.

Timer 2 (**T2**) alarm sounds in three beep intervals.

Timer 3 (**T3**) alarm sounds in four beep intervals.

Note: If multiple timers go off one after another, the beep you hear will be that of the most recent timer that went off.

5. Press **ST/SP/SET** to turn off the alarm and flashing light and to stop count up. To reset timer to 00:00, press **RESET (H/M and M/S)** simultaneously). In order to reset, that timer's icon (**T1, T2, or T3**) must be flashing.

6. To reset other timers that have begun counting up, press the **EVENT** button until the correct timer icon is flashing. Press **ST/SP/SET** to stop count up and then press **RESET (H/M and M/S)** to reset that timer to 00:00.

To Use Timer Memory Recall:

When you set any of the timers, the last time set will automatically be stored until timer is reset. When time has expired, simply press **ST/SP/SET** to stop the timer. If you want to recall the preset time, simply press **ST/SP/SET** and it will appear in the display. Press **ST/SP/SET** again to count down using the same preset time.

To Operate Timers In Count Up Mode:

Press the **EVENT** button to select any of the timers. Once the **T1, T2, or T3** icon is flashing, press the **ST/SP/SET** to begin counting up in seconds. To interrupt the count, press **ST/SP/SET**. To resume counting, press **ST/SP/SET** again. **Note:** To reset timer to 00:00, press **ST/SP/SET** and then press **RESET (H/M and M/S)**. The timer icon must be flashing in order to do this.

Consumer Service Information

If you have any questions regarding the operation of your Presto® appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8:00 AM to 4:00 PM (Central Time)
- Email us through our website at www.GoPresto.com/contact
- Write: National Presto Industries, Inc.,
Consumer Service Department
3925 North Hastings Way, Eau Claire, WI 54703-3703

Inquiries will be answered promptly by telephone, email, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

Canton Sales and Storage Company
Presto Factory Service Department
555 Matthews Drive, Canton, MS 39046-3251

Presto® Limited Warranty

(Applies only in the United States)

This quality Presto® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. **Outside the United States, this limited warranty does not apply.**

To obtain service under the warranty, please call our Consumer Service Department at 1-800-877-0441. If unable to resolve the problem, you will be instructed to send your Presto® appliance to the Presto Factory Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance as well as a description of the problem you are encountering with the appliance.

We want you to obtain maximum enjoyment from using this Presto® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, disassembly, alterations, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC., EAU CLAIRE, WI 54703-3703