


PRESTO®

ShineOn™ Electric Shoe Polisher

- Shines men's, women's, and children's shoes like a professional.
- Quickly polishes and buffs for a perfect shine, every time.
- A complete shoe care kit including power handle, two polish applicators, two polishing brushes, two buffing pads, and storage tray.

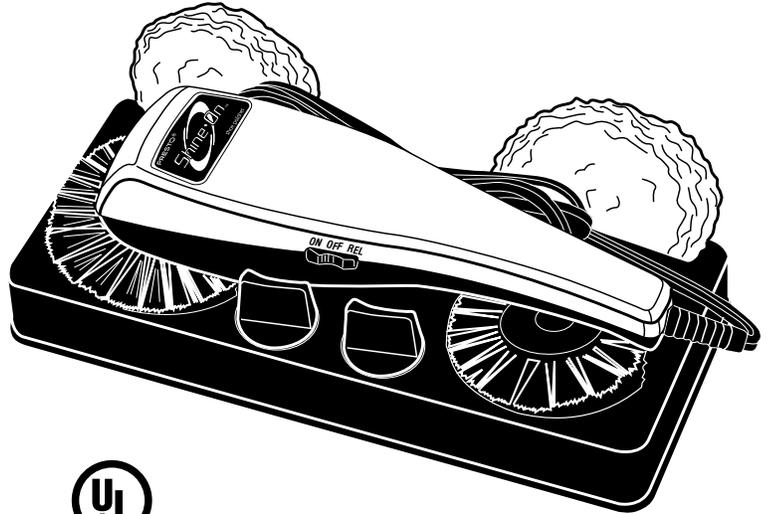

©2006 by National Presto Industries, Inc.

INSTRUCTIONS

Visit us on the web at www.GoPresto.com

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

WARNING: To reduce the risk of personal injury or property damage, when using electrical appliances basic safety precautions should always be followed, including the following:

1. **Read all instructions before using the appliance.**
2. To protect against the risk of electrical shock, do not immerse or operate electric shoe polisher in water or under running water or other liquids. Do not place or store electric shoe polisher where it can fall or be pulled into a tub or sink.
3. Close supervision is necessary when any appliance is used by or near children.
4. To disconnect, turn all controls to OFF position, then remove plug from wall outlet.
5. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
6. Unplug from outlet when not in use, when changing brushes, and before cleaning.
7. Avoid contact with moving parts.
8. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the Presto Factory Service Department or to the nearest Presto Authorized Service Station for examination, repair, or electrical or mechanical adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock, or injury.
10. Do not use outdoors.
11. Do not use shoe polisher for other than intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

POLARIZED PLUG – Connect the power supply cord to a polarized outlet only. As a safety feature, this appliance has a polarized plug (one blade is wider than the other). This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Before Use

- Become familiar with the various parts of the shoe polisher (FIG. A) and read the instructions carefully.

Polish applicators, brushes, and buffing pads are color-coded brown and black for use with different polish colors.

Note: Your shoe polisher will be shipped with one of the buffing pads attached to one of the brushes. Before you begin polishing, remove the buffing pad from the brush by turning the pad counterclockwise. Set the buffing pad aside for later use.

- It is a good idea to wear an apron or smock, to protect clothing during polishing.
- Be sure to protect the area in which polishing is being done, to avoid polish stains. Choose a location away from carpet and furniture.

How To Use

1. Using one of the two color-coded polish applicators (Fig. A) found in the storage tray, apply a very thin even coat of polish to the outer surface of the footwear to be polished. When completed, return the applicator to the appropriate receptacle in the storage tray.
2. Attach the appropriate color-coded brush to the power handle by inserting the shaft portion of the brush into the receptacle in the power handle (Fig. B). It may be necessary to turn the brush slightly to the right or left until the brush clicks into place.

To remove the brush, slide the power/brush release switch (Fig. B) to the release (REL) position. While holding the switch in this position, remove the brush.




3. Plug cord into outlet and slide the power/brush release switch (Fig. B) forward to the *ON* position.
4. Move the brush slowly over the entire shoe surface with a light steady pressure, making sure the brush gets into all contours of the shoe. When finished, slide the power switch to the *OFF* position.

5. Place the appropriate color-coded buffing pad over the polishing brush, aligning the grooves on the pad with the tabs on the brush (Fig. C). Lock it in place by turning the buffing pad clockwise. Slide the power/brush release switch forward to the *ON* position and move the buffing pad slowly over the entire shoe surface with a light steady pressure.

Helpful Hint: For a dazzling shine, spray a light mist of water on the shoes prior to buffing.

6. When finished, slide the power switch to the *OFF* position and unplug power cord from outlet.
7. Remove the buffing pad by turning it counterclockwise; place the buffing pad back in the storage tray. To remove the brush, slide the power/brush release switch (Fig. B) to the release (*REL*) position. While holding the switch in this position, remove the brush.

Storage: When not in use, place the power handle with the brush attached into the storage tray. The recessed area in the bottom of the power handle fits over the shaft of the other brush and holds the power handle in position for storage.

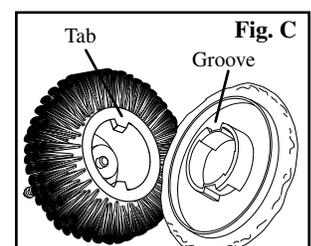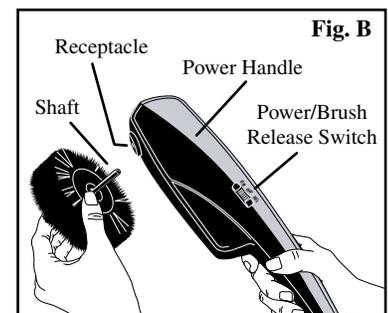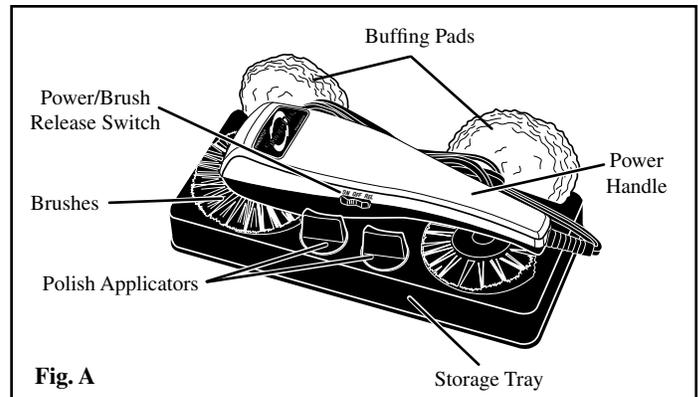

Consumer Service Information

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, contact us by any of these methods:

- **Call 1-800-877-0441** weekdays 8:00 AM to 4:30 PM (Central Time)
- **Email us at our website www.GoPresto.com**
- **Write: NATIONAL PRESTO INDUSTRIES, INC.**

**Consumer Service Department
3925 N. Hastings Way, Eau Claire, WI 54703-3703**

Inquiries will be answered promptly by telephone, email, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning, should be performed by our Factory Service Department or any Presto Authorized Service Station. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair.

Send appliances for repair to:

**CANTON SALES AND STORAGE COMPANY
Presto Factory Service Department
555 Matthews Dr., Canton, MS 39046-0529**

Appliances may also be repaired at any Presto Authorized Service Station. Check your yellow pages for Service Stations near you.

The Presto Factory Service Department and Presto Authorized Service Stations are equipped to service all PRESTO® appliances and supply genuine PRESTO® parts. Genuine PRESTO® replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine PRESTO® parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO® replacement parts, look for the PRESTO® trademark.

PRESTO® Limited Warranty

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the Presto Factory Service Department or to the nearest Presto Authorized Service Station. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

**NATIONAL PRESTO INDUSTRIES, INC.
Eau Claire, WI 54703-3703**

Form 72-695B